

เก้าอี้นวดไฟฟ้า โคอเวย์

MC-S01B/MC-S01W

coway




กนบ.

เครื่องนวดนวดนวดนี้ ได้รับยกเว้น ไม่ต้องได้รับใบอนุญาตให้มี ใช้ซึ่งเครื่องนวดนวดนวดหรือตั้งสถานีวิทยุคมนาคมตามประกาศ กสทช. เรื่อง เครื่องนวดนวดนวด และสถานีวิทยุคมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาตวิทยุคมนาคมตามพระราชบัญญัติวิทยุคมนาคม พ.ศ. 2498



กนบ. | โทรคมนาคม

กำกับดูแลเพื่อประชาชน
Call Center 1200 (InswS)

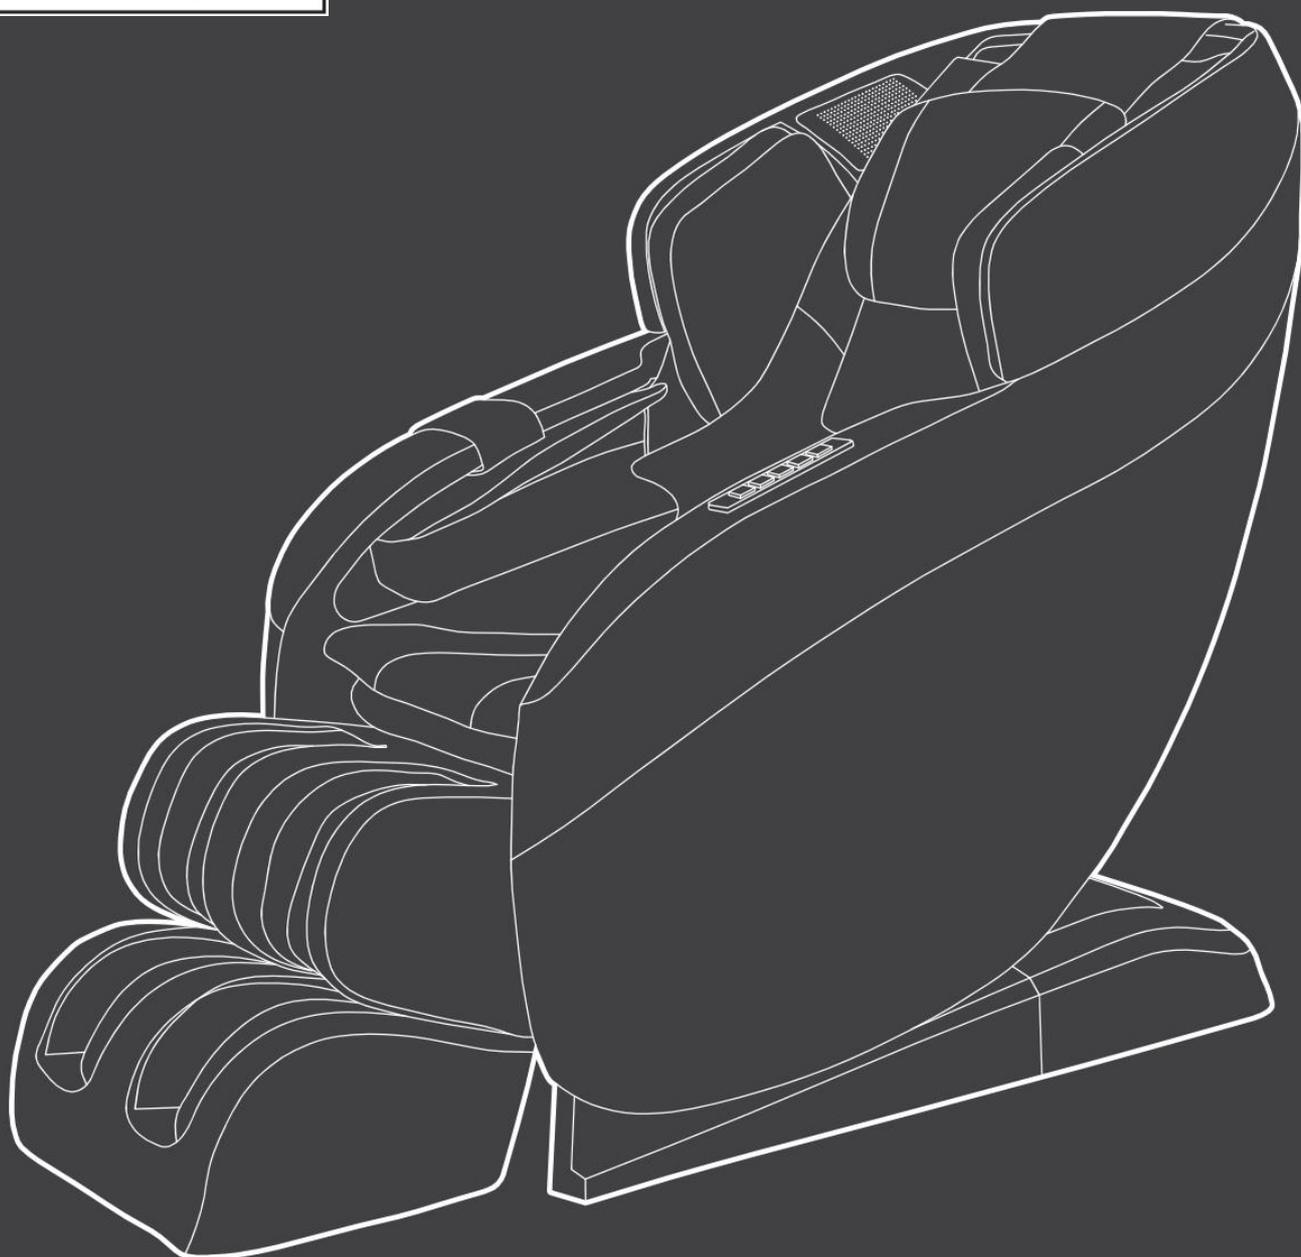

คู่มือการใช้งาน

โปรดอ่านคำแนะนำด้านความปลอดภัยโดยละเอียดก่อนใช้เก้าอี้



เก้าอี้แนวไฟฟ้า

ข้อบ่งใช้: ช่วยผ่อนคลายกล้ามเนื้อเฉพาะที่ขั้วคราวและเพิ่มการไหลเวียนโลหิตเฉพาะที่ขั้วคราว

คุณลักษณะผลิตภัณฑ์

1. เก้าอี้แนวไฟฟ้านี้ได้รับการปรับเปลี่ยนให้ความรู้สึกในการนวดที่เงียบสงบ โดยมาพร้อมเทคนิคการนวดที่หลากหลาย เช่น การนวด การเคาะ การแตะ การกดจุดแบบชิตตี้ และการนวด-แตะ ที่เลียนแบบเทคนิคของพนักงานนวดจริงๆ
 2. มีคุณสมบัติในการสแกนร่างกายที่สามารถนวดร่างกายได้อย่างแม่นยำตามความสูงและขนาดที่แตกต่างกัน
 3. วัตถุประสงค์ของปุ่มที่เป็นมิตรต่อผู้สูงอายุคือเพื่อความสะดวกและให้ผู้ใช้สัมผัสกับคุณสมบัติไว้แรง โน้มถ่วงที่แท้จริง ด้วยการสัมผัสเพียงครั้งเดียว
 4. ด้วยเทคโนโลยีประหยัคพื้นที่ ใช้พื้นที่ว่างเพียง 5 ซม. ระหว่างเก้าอี้แนวกับผนังเพื่อผลิตผลิตภัณฑ์การนวดแม้นพื้นที่จำกัด
 5. ด้วยการผสมผสานระหว่างลูกกลิ้งนวดและดุมลมที่เท้า ช่วยกระตุ้นจุดสะท้อนของเท้า ซึ่งสามารถเปิดเส้นลมปราณและปรับข้อต่อได้
 6. ด้วยการเพิ่มลูกกลิ้งนวด 4 ลูกและดุมลมบริเวณน่อง ช่วยคลายความตึงของกล้ามเนื้อ ปรับปรุงการไหลเวียนโลหิตและความยืดหยุ่นของกล้ามเนื้อ
 7. การนวดด้วยแรงดันอากาศช่วยเพิ่มการไหลเวียนโลหิตและปรับปรุงระบบน้ำเหลือง
 8. ที่วางขาสามารถยืดและหดได้ภายในระยะ 22 ซม. เหมาะสำหรับผู้ใช้งานที่มีน้ำหนักต่ำกว่า 100 กก. และสูงระหว่าง 155 ซม. ถึง 185 ซม.
 9. ด้วยปุ่มกดบนที่วางแขนที่เป็นมิตรต่อผู้สูงอายุและหน้าจอ LCD ความละเอียดสูงบนรีโมทคอนโทรล ทำให้สามารถควบคุมการตั้งค่าการนวดได้อย่างง่ายดาย
 10. เก้าอี้สำหรับนวดนี้มีลำโพง Bluetooth ในตัวซึ่งช่วยให้สามารถเล่นเพลงจากอุปกรณ์ใดๆ ผ่านการเชื่อมต่อ Bluetooth ได้
 11. ด้วยการผสมผสานรวมเทคนิคการนวดเข้ากับการบำบัดด้วยความร้อน ช่วยให้การไหลเวียนโลหิตดีขึ้นและบรรเทาอาการปวดหลัง
 12. ด้วยพอร์ต USB ที่ซ่อนอยู่ในที่วางแขนด้านซ้าย ท่านสามารถชาร์จโทรศัพท์มือถือได้ในขณะที่กำลังผลิตผลิตภัณฑ์การนวด
- ◆ 1. ขอบพระคุณที่เลือกใช้เก้าอี้แนวไฟฟ้า Coway
2. โปรดอ่านคู่มือฉบับนี้โดยละเอียดก่อนการใช้งาน
 3. โปรดเก็บรักษาคู่มือฉบับนี้ไว้ในสถานที่ปลอดภัยเพื่อใช้เป็นข้อมูลอ้างอิงต่อไป
 4. โปรดให้ความสำคัญกับคำแนะนำด้านความปลอดภัย

หมายเหตุ: เราขอสงวนสิทธิ์ในการแก้ไขรูปแบบใดๆ ซึ่งอาจมีการเปลี่ยนแปลงได้โดยไม่ต้องแจ้งให้ทราบล่วงหน้า
รูปภาพในคู่มือผู้ใช้ฉบับนี้เป็นเพียงภาพประกอบเพื่อใช้เป็นข้อมูลอ้างอิงเท่านั้น โปรดดูผลิตภัณฑ์จริง

สารบัญ

การเตรียมความพร้อม	
คำแนะนำด้านความปลอดภัย	4
โครงสร้างภายนอก	8
โครงสร้างภายใน	9
การติดตั้ง	
การติดตั้ง	10
การเตรียมความพร้อมก่อนการใช้งาน	
สภาพแวดล้อมโดยรอบ	14
วิธีการเคลื่อนย้าย การตั้งค่าก่อนการนวด	15
การนวด	
รีโมทคอนโทรล	16
คำอธิบายกราฟิกบนจอแสดงผล LCD	18
ปุ่มกดที่เป็นมิตรต่อผู้สูงอายุ	20
คำแนะนำการใช้งานและภาพประกอบฟังก์ชันการใช้งาน	
การเปิดเครื่อง/การปิดเครื่อง	22
ภาพประกอบฟังก์ชันการใช้งาน	23
ภายหลังการนวด	
การเก็บเก้าอี้แนวไฟฟ้า	24
การทำความสะอาดและการบำรุงรักษา	
การทำความสะอาดและการบำรุงรักษา	25
อื่นๆ	
คำถามที่พบบ่อยและการแก้ไขปัญหา	26
ข้อมูลทางเทคนิค	27

โปรดเก็บคู่มือฉบับนี้ไว้ในสถานที่ปลอดภัยเพื่อใช้เป็นข้อมูลอ้างอิงต่อไป

คำแนะนำด้านความปลอดภัย

- "คำแนะนำด้านความปลอดภัย" มีอยู่ในทั้งคำเตือนและข้อควรระวังสำหรับข้อมูลด้านความปลอดภัยที่สำคัญ
- โปรดอ่านคำแนะนำทั้งหมดก่อนใช้แก้อินเวคไฟฟ้านี้

 WARNING	สัญลักษณ์นี้หมายถึงสถานการณ์อันตรายซึ่งอาจส่งผลให้เสียชีวิตหรือบาดเจ็บสาหัสได้
 CAUTION	สัญลักษณ์นี้หมายถึงสถานการณ์อันตรายที่อาจเกิดขึ้นซึ่งอาจส่งผลให้ได้รับบาดเจ็บเล็กน้อยหรือปานกลาง

ความหมายของสัญลักษณ์

	สัญลักษณ์นี้หมายถึงพฤติกรรมที่ห้ามกระทำ		สัญลักษณ์นี้หมายถึงห้ามถอดประกอบเอง
	สัญลักษณ์นี้หมายถึงคำแนะนำที่ต้องปฏิบัติตามในการใช้งานแก้อินเวค		สัญลักษณ์นี้หมายถึงสายเคเบิลทำงานอย่างเหมาะสม

- ควรเก็บข้อความต่อไปนี้ไว้เพื่อใช้เป็นข้อมูลอ้างอิงต่อไป

 WARNING	
<ul style="list-style-type: none"> • ไม่เหมาะสำหรับผู้ที่มีภาวะกระดูกพรุน กระดูกสันหลังหัก และโรคปวดเฉียบพลัน เช่น อาการเคล็ดขัดยอกหรือกล้ามเนื้อตึง • ไม่เหมาะสำหรับผู้ป่วยโรคหัวใจ (รวมถึงผู้ที่ใช้เครื่องกระตุ้นหัวใจ หรือผู้ที่ใช้เครื่องมือทางการแพทย์อื่นๆ) • ไม่เหมาะกับผู้ป่วยโรคกระดูก • ไม่เหมาะสำหรับผู้ที่มีความผิดปกติทางการรับรู้ อันเนื่องมาจากความผิดปกติของระบบไหลเวียนเลือดส่วนปลายในระดับสูง เช่น โรคเบาหวาน • ไม่เหมาะสำหรับผู้ที่มีอาการกระดูกสันหลังคด • ไม่เหมาะสำหรับผู้ที่มีหมอนรองกระดูกเคลื่อน (หมอนรองกระดูกทับเส้นประสาท) • ไม่เหมาะสำหรับสตรีตั้งครรภ์ สตรีที่เพิ่งคลอดบุตร และผู้ที่มีปัญหาสุขภาพไม่ดี • ไม่เหมาะสำหรับผู้ที่ใช้ที่ได้รับบาดเจ็บ เช่น ภาวะล้มเลือดจุดดำ หลอดเลือดอุดตันเฉียบพลัน และการอักเสบของผิวหนังต่างๆ • ไม่แนะนำให้ใช้กับผู้ที่มีอาการผิดปกติของระบบควบคุมอุณหภูมิและความเจ็บป่วยอันเนื่องมาจากความร้อน • ไม่แนะนำให้ใช้กับผู้ที่มีอาการไข้สูง (อาการอักเสบเฉียบพลัน เช่น อาการหอบแรง หงาวสั้น ความดันโลหิตเปลี่ยนแปลง ความอ่อนล้าทางร่างกาย) • ไม่แนะนำให้ใช้กับผู้ที่มีอายุ 80 ปีขึ้นไป • ไม่แนะนำให้ใช้กับผู้ที่มีความบกพร่องทางสติสัมปชัญญะ มีความเสี่ยงต่อสภาพทางจิต จิตใจไม่ปกติ และไม่มีความสามารถในการใช้งานแก้อินเวคไฟ • ไม่แนะนำให้ใช้กับผู้ที่มีร่างกายไม่แข็งแรงพอที่จะดูแลตัวเองได้ เช่น ทารก • ห้ามใช้แก้อินเวคขณะที่มือเปียก • ห้ามใช้การนวดนี้หากมีความไวต่อหรือแพ้ความร้อน • อย่าปล่อยให้บบนแก้อินเวคด้วย ผู้ที่มีอาการข้างต้น ไม่ควรใช้แก้อินเวคหรือควรใช้ตามคำแนะนำของแพทย์ ผู้ใช้ควรใช้อ้อย่างมีวิจารณญาณ 	<p>ค ว า ม เสี ย ง ต่ อ การ เกิด อุบัติเหตุ ห รื อ ความ ไม่ สบายตัว</p>

 WARNING	
<ul style="list-style-type: none"> • ก่อนนั่ง โปรดตรวจสอบให้แน่ใจว่าไม่มีสิ่งแปลกปลอมอยู่ในส่วนต่างๆ ของแก้อินเวค • เมื่อปรับพนักพิง ปรับเก้าอี้ให้อยู่ในท่าปรับเอนขึ้นและลง หรือทำเหยียดนอน ตรวจสอบให้แน่ใจว่าไม่มีผู้คนหรือสิ่งของอยู่ในบริเวณดังกล่าว (ด้านหลัง ด้านล่าง หรือด้านหน้าของแก้อินเวค) • ในกรณีเกิดความคิดผิดปกติทางกายภาพหรือความคิดผิดปกติการใช้งาน ให้หยุดใช้ทันทีและปรึกษาแพทย์ • ให้ความสำคัญกับการเคลื่อนไหวของลูกกลิ้งนวดรอบศีรษะและคอ เพราะไม่ควรกดทับมากเกินไป • หลีกเลี่ยงการนวดคอมากเกินไป • ห้ามนวดบริเวณหน้าท้องหรือหัวเข่าด้วยแก้อินเวคไฟฟ้าด้วย • หยุดการนวดก่อนจะลุกออกจากที่นั่งหรือหากต้องการลุกออกจากที่นั่ง • ห้ามใช้ร่วมกับเครื่องมืออื่นๆ • ห้ามให้เด็กหรือสัตว์เลื้อยคลานหรือรอบๆ แก้อินเวค (โดยเฉพาะในขณะที่ใช้งาน) และห้ามนั่งหรือยืนบนพนักพิง ที่วางแขน หรือที่วางขา • ก่อนจะเคลื่อนย้ายแก้อินเวค ต้องปรับมุมพนักพิงและที่วางขาให้อยู่ในตำแหน่งเดิม 	<p>อุบัติเหตุ/ การ บาดเจ็บ</p>
<ul style="list-style-type: none"> • เมื่อประกอบให้ปิดสวิตช์และถอดปลั๊กหลังจากที่แก้อินเวคกลับสู่ตำแหน่งเดิม • เสียบปลั๊กไฟเข้ากับเต้าเสียบ • ตรวจสอบให้แน่ใจว่าปลั๊กไฟเสียบเข้ากับเต้าเสียบอย่างแน่นหนาเพื่อลดความเสี่ยงจากการเกิดไฟฟ้าลัดวงจรหรือไฟไหม้ • ถอดปลั๊กเมื่อไม่ได้ใช้งานแก้อินเวค • ปิดสวิตช์และถอดสายไฟเมื่อไฟฟ้าขัดข้อง 	<p>ไฟไหม้ และไฟดูด</p>
<ul style="list-style-type: none"> • อนุญาตให้หับเบาะแก้อินเวคเพื่อจัดเก็บ • ห้ามเปิดเครื่องโดยที่ไมคนนั่งบนแก้อินเวคเป็นเวลานาน • ห้ามเปิดเครื่องใช้ไฟฟ้าที่ทั้งไว้โดยไม่มีครูลแลเมื่อเสียบปลั๊ก • ห้ามใช้แก้อินเวคไฟฟ้าหากสายไฟ ปลั๊ก หรือเคเบิลชำรุด หรือเคเบิลหลวม • ห้ามใช้แก้อินเวคไฟฟ้านอกเหนือจากแรงดันไฟฟ้าที่กำหนด • ห้ามใช้แก้อินเวคไฟฟ้าหากสายไฟและปลั๊กชำรุดหรือใช้งานไม่ได้ • ห้ามวางของหนักทับสายไฟ • ห้ามจ่อ ดึง บิด หรือมัดสายไฟ • หลีกเลี่ยงการวางสายไฟไว้ในสถานที่ที่มีอุณหภูมิสูง เช่น ใกล้กับเครื่องทำความร้อนมากเกินไป 	<p>อุบัติเหตุ</p> <p>ไฟไหม้ และไฟดูด</p>
<ul style="list-style-type: none"> • หากแก้อินเวคชำรุด เสียหาย โคนน้ำกระเซ็นหรือหยุดใส่ โปรดติดต่อ Call center เบอร์ 1421 เพื่อให้ช่างเทคนิคของ Coway ดำเนินการซ่อมแซม • หากสายไฟหรือปลั๊กชำรุด โปรดอย่าเปลี่ยนด้วยตัวเอง โปรดติดต่อ Call center เบอร์ 1421 เพื่อให้ช่างเทคนิคของ Coway เปลี่ยนสายไฟหรือปลั๊ก • เพื่อหลีกเลี่ยงไฟฟ้ช็อตหรือการบาดเจ็บ โปรดอย่าเปิดหรือถอดชิ้นส่วนใดๆ ของแก้อินเวค โปรดติดต่อ Call center เบอร์ 1421 เพื่อให้ช่างเทคนิคของ Coway ดำเนินการซ่อมแซม • หากหนังสือหรือเบาะรองนั่งของแก้อินเวคชำรุด โปรดหยุดใช้งานแก้อินเวคดังกล่าวและโปรดติดต่อ Call center เบอร์ 1421 เพื่อให้ช่างเทคนิคของ Coway ดำเนินการซ่อมแซม 	<p>การถอด ประกอบ และการ บำรุงรักษา</p>



CAUTION

!	<ul style="list-style-type: none"> • โปรดใช้งานแก้อื่นหลอดไฟฟ้านบนพื้นผิวที่เรียบหรืออยู่ในระดับที่เสมอกัน 	เพื่อป้องกันการล้มกะทันหัน
	<ul style="list-style-type: none"> • ระยะเวลาสูงสุดที่แนะนำคือ 20 นาที หากนวดบริเวณเดิมซ้ำๆ อาจทำให้รู้สึกไม่สบายตัว 	การนวดนานเกินไปไม่เป็นผลดีต่อร่างกาย
	<ul style="list-style-type: none"> • เพื่อหลีกเลี่ยงการบาดเจ็บ โปรดตรวจสอบทุกอย่างเพื่อให้แน่ใจว่าศีรษะอยู่ในตำแหน่งการนวดที่ถูกต้อง 	เพื่อหลีกเลี่ยงการบาดเจ็บที่อาจเกิดขึ้นโดยไม่ตั้งใจ
	<ul style="list-style-type: none"> • ควรเก็บรีโมทคอนโทรลไว้ในกระเป๋าทิ้งไว้เพื่อป้องกันไม่ให้รีโมทคอนโทรลถูกทับหรือหล่นเสียหาย 	
	<ul style="list-style-type: none"> • โปรดตรวจสอบให้แน่ใจว่าสวิตช์ไฟอยู่ที่ปุ่ม "ปิด" ก่อนเสียบปลั๊กไฟเข้ากับเต้าเสียบสายไฟ 	
	<ul style="list-style-type: none"> • ปิดการควบคุมทั้งหมดก่อนที่จะถอดปลั๊กออกจากเต้าเสียบ 	เพื่อหลีกเลี่ยงอุบัติเหตุขณะเปิดสวิตช์ไฟ
	<ul style="list-style-type: none"> • ตรวจสอบให้แน่ใจว่าปลั๊กไฟเสียบเข้ากับเต้าเสียบสายไฟจนสุด 	เพื่อลดการเกิดไฟดูดและความเสี่ยงในการเกิดไฟไหม้
	<ul style="list-style-type: none"> • โปรดตรวจสอบว่าสายไฟได้รับความเสียหายหรือไม่เพื่อให้แน่ใจว่าไม่มีเศษซากหรือน้ำบนสายไฟ 	เพื่อป้องกันไฟดูดในกรณีที่มีไฟรั่วหรืออุปกรณ์ชำรุด
⊘	<ul style="list-style-type: none"> • ห้ามกดลูกกลิ้งนวดด้วยมือหรือเท้า • ห้ามสอดมือเข้าไปในที่วางแขนหรืออุ้งลม • ห้ามสอดมือหรือเท้าเข้าไปในช่องว่างของชิ้นส่วนตัวเครื่อง • ห้ามทิ้งหรือใส่สิ่งใดลงไปบนช่องต่างๆ ของแก้อื่นนวด • ห้ามยืน นั่ง หรือวางสิ่งของใดๆ บนพนักพิง ที่วางแขน หรือที่วางขา • ห้ามเคลื่อนย้ายแก้อื่นนวดขณะใช้งาน ห้ามยืนบนแก้อื่นนวดขณะใช้งาน • ห้ามดึงปลั๊กไฟหรือปิดเครื่องขณะใช้งาน • ห้ามวางมือหรือศีรษะไว้ในบริเวณที่วางขาหรือใต้ที่วางขา • ห้ามใช้แก้อื่นนวดในขณะที่มีวัตถุแข็งๆ วางอยู่บนศีรษะ เช่น เครื่องประดับผม • ห้ามใส่ของแข็งไว้ในกระเป๋ายกขณะนวดศีรษะหรือสะโพก • ห้ามนั่งหรือกดพนักพิงขณะแก้อื่นนวดอยู่ในตำแหน่งนอน • ห้ามใช้แก้อื่นนวดกับผิวหนังโดยตรงเพื่อหลีกเลี่ยงการระคายเคืองผิวหนังหรือแผลไหม้ขึ้นเนื่องจากความเย็นจัด • เพื่อหลีกเลี่ยงการพันกับแก้อื่นนวด โปรดอย่าสวมเสื้อผ้าหลวมๆ หรือเครื่องประดับในขณะใช้งาน • เพื่อหลีกเลี่ยงผมพันกับแก้อื่นนวด โปรดมัดผมให้เรียบร้อยและเก็บผมให้ห่างจากชิ้นส่วนที่เคลื่อนไหว 	เพื่อหลีกเลี่ยงอุบัติเหตุหรือการบาดเจ็บ
	<ul style="list-style-type: none"> • เก็บแก้อื่นนวดให้ห่างจากพื้นผิวที่ร้อน สถานที่ยื่น วัตถุมีคม สารเคมีกัดกร่อน สภาพแวดล้อมที่คิดไฟและระเบิดได้ 	เพื่อหลีกเลี่ยงไม่ให้สีหนังของแก้อื่นนวดเสียหายหรือเสื่อมสภาพ
	<ul style="list-style-type: none"> • ห้ามใช้ผ้าพันไฟฟ้าหรือผลิตภัณฑ์ทำความร้อนอื่นๆ บนแก้อื่นนวด 	
	<ul style="list-style-type: none"> • เก็บแก้อื่นนวดให้ห่างจากเตาหรือผลิตภัณฑ์ทำความร้อนอื่นๆ 	
	<ul style="list-style-type: none"> • เก็บแก้อื่นนวดให้พ้นจากฝุ่นละออง 	
	<ul style="list-style-type: none"> • ห้ามวางแก้อื่นนวดในบริเวณที่โดนแสงแดดโดยตรงหรือในสถานที่ที่มีอุณหภูมิสูง 	
	<ul style="list-style-type: none"> • ห้ามวางแก้อื่นนวดในพื้นที่แคบ 	
	<ul style="list-style-type: none"> • ห้ามใช้แก้อื่นนวดในบริเวณที่มีการถ่ายเทอากาศไม่ดี 	
	<ul style="list-style-type: none"> • ห้ามใช้แก้อื่นนวดกลางแจ้ง 	



CAUTION

⊘	<ul style="list-style-type: none"> • ห้ามวางหรือเก็บแก้อื่นนวดในสถานที่ เช่น สระว่ายน้ำ หรือห้องน้ำ • โปรดตรวจสอบให้แน่ใจว่าแก้อื่นนวดและรีโมทคอนโทรลอยู่ในสภาพแห้งตลอดเวลา • ห้ามใช้แก้อื่นนวดหากร่างกายของผู้ใช้เปียก 	เพื่อป้องกันไฟดูด
⚡	<ul style="list-style-type: none"> • โปรดตรวจสอบให้แน่ใจว่าคุณต่อสายดินอย่างถูกต้องเพื่อหลีกเลี่ยงไฟฟ้าช็อต หากคุณไม่ทราบวิธีต่อสายดิน โปรดติดต่อ Call center เบอร์ 1421 เพื่อให้ช่างเทคนิคของ Coway ดำเนินการซ่อมแซม • ห้ามใช้ปลั๊กอะแดปเตอร์ (หากปลั๊กไม่ตรงกับเต้ารับ โปรดอย่าเปลี่ยนปลั๊กด้วยตนเอง และให้ช่างเทคนิคของ Coway คิดตั้งค่าบริการที่ตรงกัน) 	เพื่อป้องกันไฟดูด
⚡	<ul style="list-style-type: none"> • ถอดปลั๊กออกก่อนทำความสะอาดแก้อื่นนวด • ถอดปลั๊กเมื่อไม่ได้ใช้แก้อื่นนวด • ถอดปลั๊กออกหากพบว่าแหล่งจ่ายไฟได้รับความเสียหาย • จับปลั๊กเพื่อถอดสายไฟ • โปรดปิดสวิตช์และถอดปลั๊กออกหลังจากนวด 	เพื่อหลีกเลี่ยงไฟดูดหรืออันตรายจากไฟไหม้
	<ul style="list-style-type: none"> • โปรดปิดสวิตช์ไฟและถอดสายไฟออกเมื่อไฟดับ 	เพื่อหลีกเลี่ยงการเกิดอุบัติเหตุ
		เพื่อหลีกเลี่ยงความเสี่ยงความเสียหายหรืออุบัติเหตุเมื่อเปิดเครื่องอีกครั้ง

คำแนะนำในการต่อสายดิน

✦ ✖ แก้อื่นนวดมีสายไฟพร้อมสายดิน ต้องเสียบปลั๊กเข้ากับเต้าเสียบที่เหมาะสมเพื่อให้แก้อื่นนวดทำงานได้



การเปลี่ยนฟิวส์

✦ ✖ เมื่อฟิวส์ขาด โปรดติดต่อ Call center เบอร์ 1421 เพื่อให้ช่างเทคนิคของ Coway ดำเนินการซ่อมแซม




<p>ไม่อนุญาตให้เก็บสายดินในสถานที่เหล่านี้</p>	<p>ท่อแก๊ส : อาจทำให้เกิดการระเบิดหรือไฟไหม้ได้</p> <p>สายโทรศัพท์และสายล่อฟ้า : อาจทำให้เกิดไฟดูดและไฟไหม้ได้เมื่อมีฟ้าร้อง</p> <p>ท่อน้ำ : สายดินไม่มีประโยชน์ในบริเวณที่มีพลาสติกอยู่</p>
--	--

โครงสร้างภายนอก

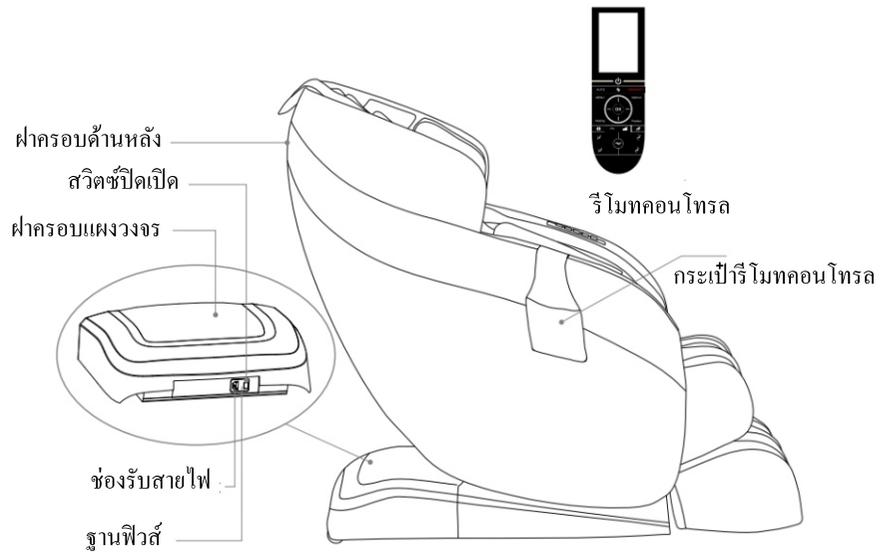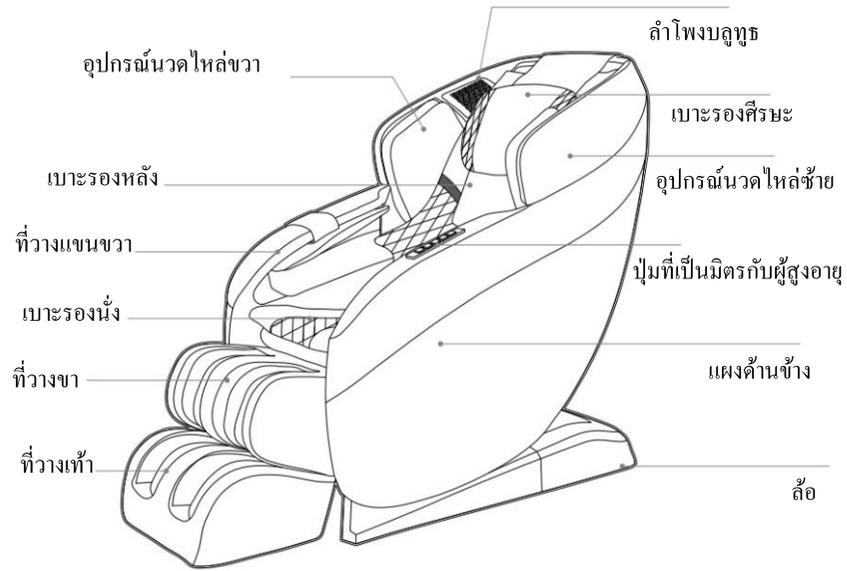

โครงสร้างภายใน

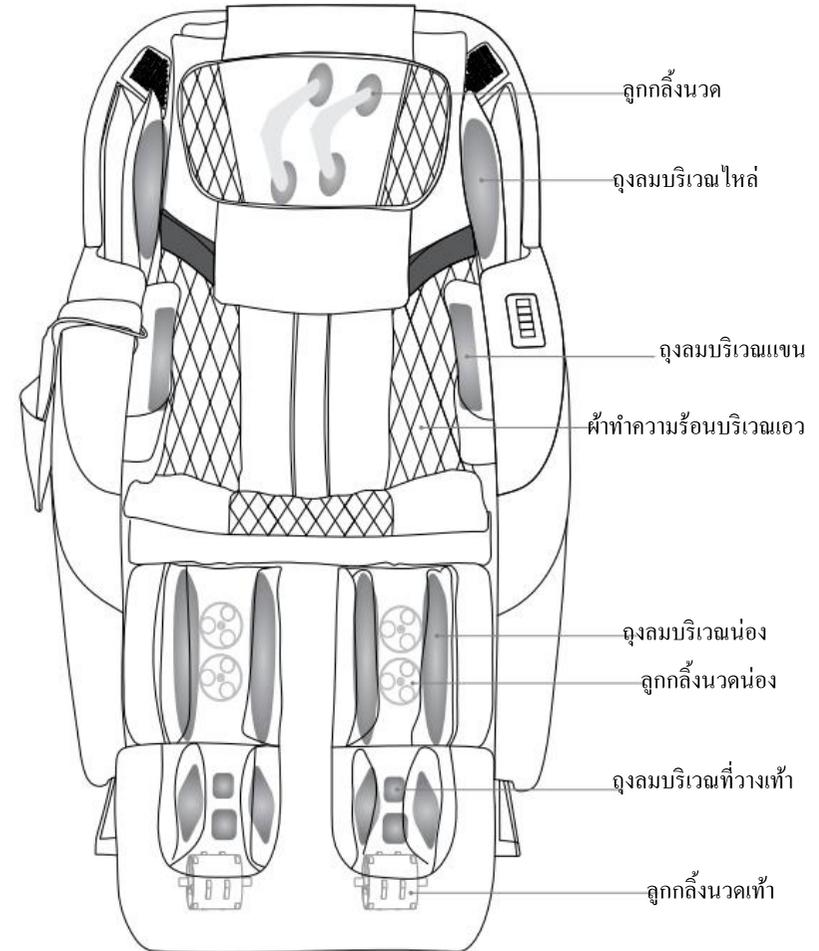


การติดตั้ง

ขั้นตอนที่ 1


นำตัวเครื่องและอุปกรณ์เสริมออกจากกล่องกระดาษแข็ง

- 1 นำกล่องอุปกรณ์เสริมและที่วางขาออกมา
- 2 นำตัวเครื่องเก้าอี้นวดออกมา
- 3 ตรวจสอบดูว่าอุปกรณ์เสริมทั้งหมดครบถ้วนหรือไม่

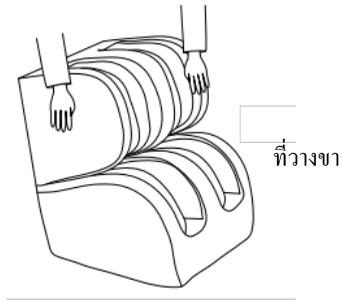

นำที่วางขาออกจากกล่องกระดาษแข็งโดยจับที่ด้านซ้ายและขวาของที่วางขา

ตัวเครื่องเก้าอี้นวดไฟฟ้า

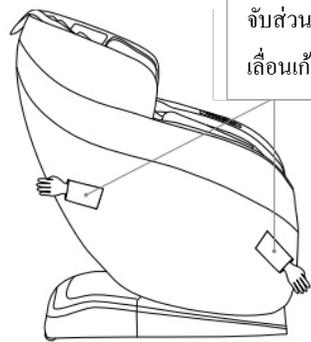

จับส่วนล่างของพนักแขนไว้และเลื่อนเก้าอี้นวดออกอย่างช้าๆ

อุปกรณ์เสริม



สายไฟ




คู่มือการใช้งาน

ขั้นตอนที่ 2


ใส่รีโมทคอนโทรลไว้ในกระเป๋ารีโมทคอนโทรล

- 1 ถอดกระเป๋ารีโมทคอนโทรลออกจากถุงลมแขนด้านในฝั่งขวา
- 2 ใส่รีโมทคอนโทรลลงในกระเป๋ารีโมทคอนโทรล

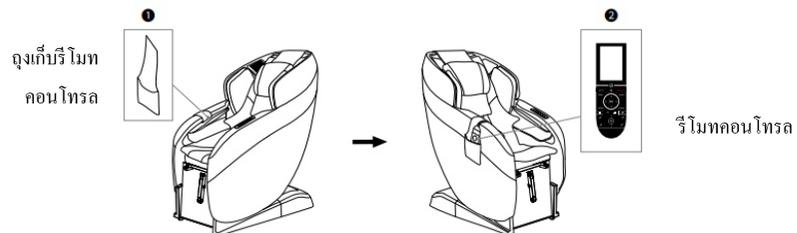

การตรวจสอบสภาพแวดล้อม

ตรวจสอบให้แน่ใจว่ามีพื้นที่ที่เพียงพอในการปรับเอน

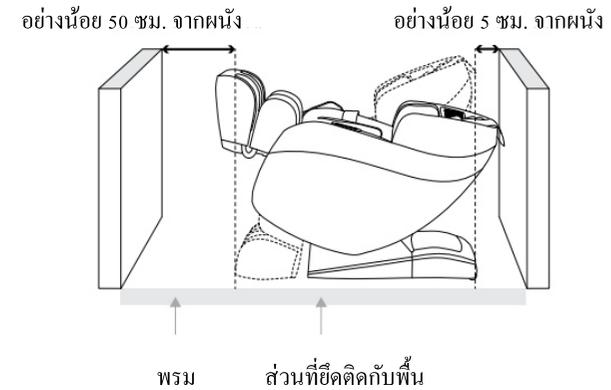

เนื่องจากเก้าอี้นวดมีน้ำหนักมาก โปรดใช้เสื่อ พรม หรือวัสดุพื้นนุ่มเพื่อปกป้องพื้น



CAUTION

- ห้ามวางเก้าอี้นวดในบริเวณที่เปียกชื้น เช่น สระว่ายน้ำ และห้องน้ำ เพื่อหลีกเลี่ยงไฟรั่วหรือไฟดูด
- ห้ามวางเก้าอี้นวดไว้กลางแดด เพื่อป้องกันไม่ให้เบาะเสื่อม สีซีดจาง หรือเปลี่ยนสี
- ห้ามวางเก้าอี้นวดใกล้เตาหรือบริเวณที่มีความร้อนอื่นๆ เพื่อหลีกเลี่ยงเบาะเสื่อมสภาพ
- โปรดวางเก้าอี้นวดบนพื้นผิวที่เรียบ เพื่อป้องกันไม่ให้เก้าอี้นวดหล่นหรือเกิดเหตุการณ์ไม่คาดคิดอื่นๆ


ขั้นตอนที่ 3

ติดตั้งที่วางขา

- ❶ วางส่วนหลังของที่วางขาไว้ใกล้กับด้านหลังเก้าอี้
- ❷ เสียบปลั๊กไฟบริเวณขาและเห็นเข้ากับตัวรับบนตัวเครื่องและปลั๊กท่ออากาศบนตัวเครื่อง
- ❸ ยกที่วางขาขึ้นด้วยมือทั้งสองข้าง ดันเพลลาของที่พักขาไปทางมุมระดับของตัวแขน และล็อกเข้ากับตัวเครื่อง
- ❹ ดัดคืนตุ๊กแกของที่วางขาเข้ากับเบาะรองนั่ง



หมายเหตุ: ต้องยึดเพลลาให้แน่น มิฉะนั้นจะหลุดออก เมื่อเสียบปลั๊กท่อลมและสายรัดสายไฟ อย่าพันท่อลมและสายรัดสายไฟเข้าด้วยกัน

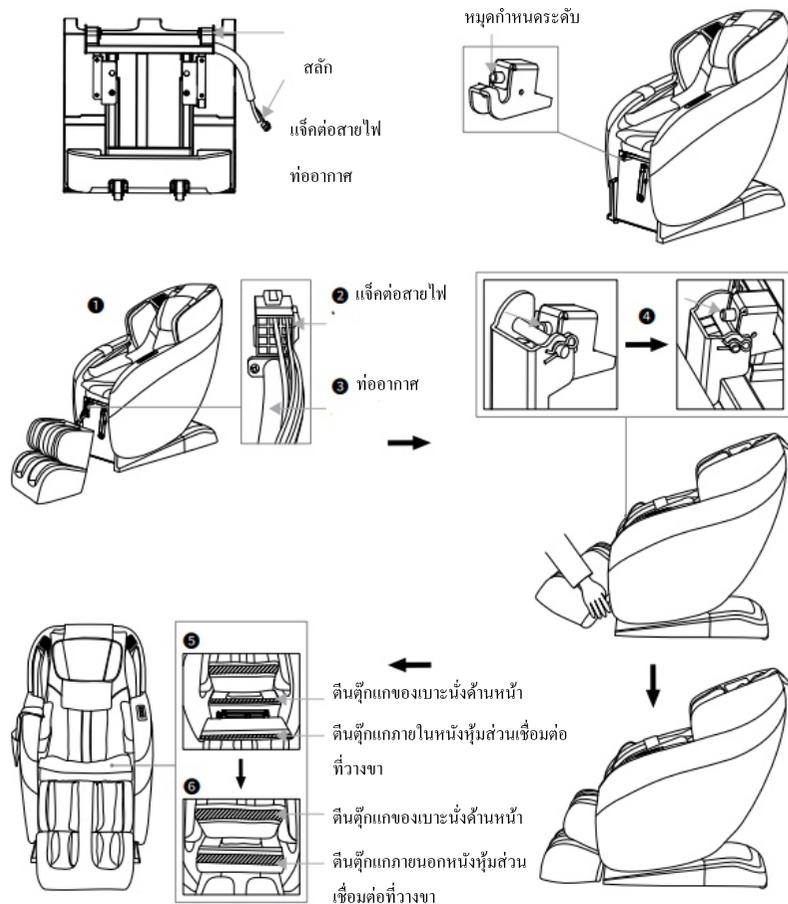


ขั้นตอนที่ 4

ภายหลังการประกอบ

- ❶ เสียบสายเคเบิลเข้ากับช่องรับสายไฟ
- ❷ เปิดสวิตช์ด้านหลังกล่องไฟ (สวิตช์ "เปิด/ปิดF", "O/I", กด "I" เพื่อเปิดเครื่อง)
- ❸ ใช้รีโมทคอนโทรลเลือกโปรแกรมการนวดที่ต้องการ



ทำให้มั่นใจก่อนว่าสวิตช์ปิดอยู่ก่อนเสียบสายไฟเข้ากับช่องรับสายไฟ

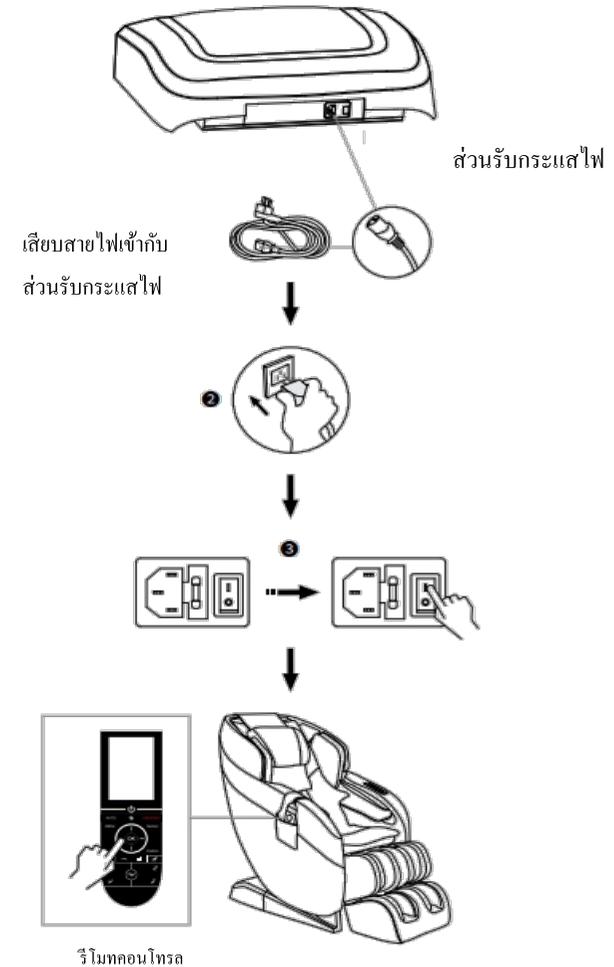


สภาพแวดล้อมโดยรอบ

⚠ CAUTION	
⊘	ห้ามวางเก้าอี้ในบริเวณเปียก เช่น สระว่ายน้ำ และห้องน้ำ เพื่อหลีกเลี่ยงไม่ให้เกิดไฟรั่วหรือไฟดูด
⊘	ห้ามวางเก้าอี้ในบริเวณใกล้เตา ใกล้เคียง หรือบริเวณที่มีความร้อนอื่นๆ เพื่อป้องกันไม่ให้เกิดไฟไหม้
!	โปรดวางเก้าอี้บนพื้นผิวเรียบ เพื่อป้องกันไม่ให้เก้าอี้คว่ำหรือเกิดเหตุการณ์ไม่คาดคิดอื่นๆ


การตรวจสอบพื้นที่โดยรอบ

- ตรวจสอบบริเวณด้านหน้าและด้านหลังของเก้าอี้เพื่อให้เห็นใจว่าไม่มีผู้คน สัตว์เลี้ยง หรือวัตถุอื่น ๆ อยู่บริเวณนั้น

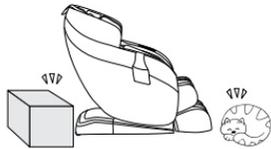

การตรวจสอบสายไฟและปลั๊ก

1. ใช้ผ้าแห้งเช็ดฝุ่นบนปลั๊กเป็นประจำ
2. ห้ามจุ่ม ดึง บิด หรือมัดสายไฟ

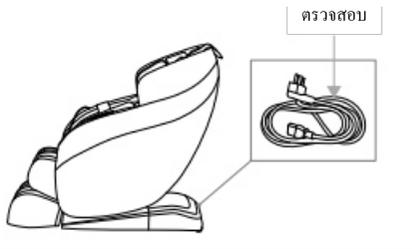


พื้นที่ว่างสำหรับวางเก้าอี้



การตรวจสอบสภาพโดยรอบ

เมื่อพนักพิงหรือที่วางขาเอนหรือยืดออก พึงคำนึงว่า:

1. ตรวจสอบว่ามีคน สัตว์เลี้ยง หรือสิ่งของใด ๆ อยู่รอบ ๆ เก้าอี้หรือไม่
2. ตรวจสอบขนาดพื้นที่

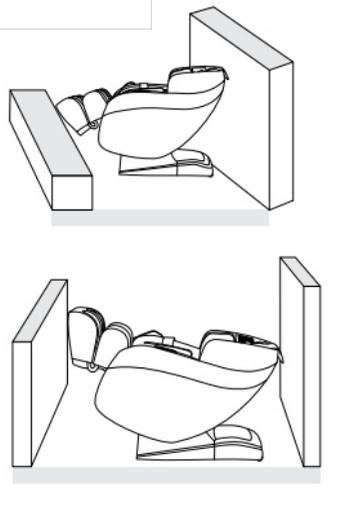

วิธีการเคลื่อนย้าย

⚠ CAUTION	
❖	ห้ามเคลื่อนย้ายเก้าอี้ในขณะที่เครื่องกำลังทำงานเพื่อหลีกเลี่ยงอุบัติเหตุหรือความเสียหาย

การปกป้องพื้น

- ❖ มัดสายเคเบิลและวางไว้บนที่นั่งเพื่อหลีกเลี่ยงความเสียหายขณะเคลื่อนย้ายเก้าอี้
- ❖ ห้ามทำเก้าอี้คว่ำหรือปล่อยเก้าอี้คว่ำทันทีขณะเคลื่อนย้ายเก้าอี้
- ❖ ห้ามเคลื่อนย้ายเก้าอี้บนพื้นไม้ พื้นผิวขรุขระ หรือในพื้นที่ยื่น
- ❖ ห้ามเคลื่อนย้ายเก้าอี้โดยไม่ได้รับความช่วยเหลือจากช่างเทคนิคของ Coway
- ❖ ทำให้มั่นใจก่อนว่าสวิทช์ปิดอยู่และถอดปลั๊กก่อนทำการเคลื่อนย้ายเก้าอี้

การเคลื่อนย้ายเก้าอี้ไฟฟ้า

กดส่วนศีรษะลงเพื่อให้เก้าอี้เอนไปด้านหลังและดึงบนล้อ หลังจากนั้นค่อยๆ ดันเก้าอี้ไปยังตำแหน่งที่ต้องการและวางลงอย่างช้าๆ



⚠

โปรดจับที่วางเท้าไว้ขณะเคลื่อนย้ายเก้าอี้เพื่อปกป้องหนังจากรอยขีดข่วน ในการเคลื่อนย้ายผลิตภัณฑ์นี้ โปรดอย่าที่วางแขนขึ้น


การตั้งค่าก่อนการนวด

ก่อนการปรับตั้งค่า

- ❖ ตรวจสอบให้แน่ใจว่าลูกกลิ้งนวดหยุดอยู่ที่ส่วนบนของพนักพิง จากนั้นจึงค่อย ๆ นั่งลงบนเก้าอี้
 - ❖ การวางลูกกลิ้งในตำแหน่งที่ไม่เหมาะสมอาจทำให้เกิดการบาดเจ็บได้
- ตำแหน่งที่ถูกต้อง**
- เอนหลังบนพนักพิงและศีรษะบนเบาะรองศีรษะ หลังจากการตรวจปรับให้เสร็จสิ้นเก้าอี้จะส่งเสียง "บี๊บ" สามครั้ง ดำเนินการปรับบนเล็กน้อยโดยการกดปุ่ม "ขึ้น/ลง" บนรีโมทคอนโทรล
- ❖ การตรวจปรับตำแหน่งให้ลของผู้ใช้ที่ไม่ถูกต้องอาจส่งผลต่อความสะอาดสบายในการนวด




คำแนะนำ

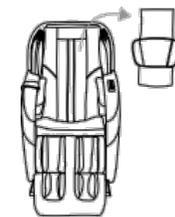

หากรู้สึกถึงความแรงของการนวดไม่เพียงพอ อาจถอดเบาะรองศีรษะ ออกได้

เนื่องจากเก้าอี้ไม่มีน้ำหนักมาก จึงอาจทำให้พื้นเสียหายได้ในระยะยาว โปรดใช้เสื่อพรม หรือวัสดุนุ่มเพื่อปกป้องพื้นของคุณ

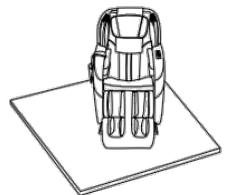

รีโมทคอนโทรล



1		เปิด/ปิด	กดปุ่มนี้เพื่อเริ่มหรือหยุดโปรแกรมการนวด
2		ออโต้	กดปุ่มนี้เพื่อเลือกโปรแกรมนวดอัตโนมัติ 3 โปรแกรม ได้แก่ "พื้นตัว", "บรรเทา" และ "ช็อคกล้ามเนื้อ" เวลาทำงานเริ่มต้นคือ 20 นาที
3		แรงดันอากาศ	กดปุ่มนี้เพื่อเลือกการนวดด้วยแรงดันอากาศที่ร่างกายซึ่งรวมถึงร่างกายส่วนบนและส่วนล่าง
4		ปุ่มฉุกเฉิน	กดปุ่มนี้เพื่อหยุดฟังก์ชันการนวดทั้งหมด และสามารถเลือกปุ่ม "เปิด/ปิด" เพื่อกลับมาใช้เก้าอี้นวดได้เท่านั้น
5		เมนู	กดปุ่มนี้เพื่อสลับหน้าจอของรีโมทคอนโทรลไปที่อินเตอร์เฟซเมนู คุณสามารถเลือกใช้โปรแกรมการนวดได้โดยกดปุ่มเลือก "อัตโนมัติ" จากนั้นกดปุ่มนำทาง (ขึ้น ลง ซ้าย ขวา) และปุ่ม "ตกลง" เพื่อยืนยันโปรแกรมการนวด การตั้งค่าการนวดอื่นๆ จะปรากฏขึ้นหลังจากกดปุ่ม "เมนู"
6		วิธีการ	กดปุ่มนี้เพื่อเลือกวิธีการนวด 5 วิธี ได้แก่ การนวด การเคาะ การกดจุด การกดจุดแบบซิกซ์ดี และ การนวดและเคาะ
7		ทำความร้อน	กดปุ่มนี้เพื่อเปิดและปิดฟังก์ชันทำความร้อนบริเวณ เมื่อเปิดระบบทำความร้อน สัญลักษณ์ทำความร้อนที่เกี่ยวข้องจะเปลี่ยนเป็นสีแดง เมื่อปิดระบบทำความร้อน สัญลักษณ์ทำความร้อนที่เกี่ยวข้องจะหายไป
8		ปรับตำแหน่ง	เมื่อเก้าอี้นวดอยู่ในโหมดนวดแบบกำหนดเอง ให้กดปุ่มนี้เพื่อเลือกตัวเลือกการนวดตามส่วนต่างๆ ของร่างกาย ได้แก่ "ทั้งหมด" "บางส่วน" และ "บางจุด"
9		ปุ่มกดนำทาง	กดปุ่มนำทาง (ขึ้น, ลง, ซ้าย, ขวา) เพื่อใช้เป็นปุ่มนำทางเมนูในโหมดเมนู โดยสามารถใช้ปุ่ม "ขึ้น" และ "ลง" เพื่อเลือกการหมุนอย่างรวดเร็ว และปุ่ม "ซ้าย" และ "ขวา" เพื่อเข้าสู่เมนูก่อนหน้าและถัดไปอย่างรวดเร็ว ปุ่ม "ขึ้น" และ "ลง" ทำหน้าที่ปรับตำแหน่งของเก้าอี้นวดด้วยตนเองระหว่างการตรวจเช็คความสูงของไหล่และฟังก์ชันปรับจุดจะถูกกำหนดไว้ในโหมดการนวดด้วยตนเอง
10		โอเค-ปุ่มกดยืนยัน	กดปุ่มนี้เพื่อยืนยันการเลือกเมนูและเปิดเมนูถัดไป
11		ระยะกว้างของลูกกลิ้งขนาด	กดปุ่มนี้เพื่อปรับระยะกว้างของลูกกลิ้งขนาด ซึ่งได้แก่ "แคบ" "กลาง" และ "กว้าง" ในระหว่างการเคาะ การกด และการกดจุดแบบซิกซ์ดีแบบกำหนดเอง
12		ความแน่นของลูกกลิ้ง	กดปุ่มนี้เพื่อปรับระดับความแรงของการนวดด้วยลูกกลิ้งนวดได้ 5 ระดับ
13		ความเร็วของลูกกลิ้งขนาด	กดปุ่มนี้เพื่อปรับความเร็วของลูกกลิ้งขนาด 5 ระดับภายใต้สถานะการนวดแบบกำหนดเอง
14		ลูกกลิ้งขนาดเท้า	กดปุ่มนี้เพื่อปรับความเร็ว ระดับ คือ "รวดเร็ว" "นุ่มนวล" และ "หยุด" บนลูกกลิ้งเท้าตามลำดับ
15		ปรับที่วางขาขึ้น	กดปุ่มนี้ค้างไว้ ที่วางขาจะยกขึ้น เมื่อปล่อยปุ่มนี้ ที่วางขาจะหยุดยกขึ้น
16		ปรับที่วางขาสูง	กดปุ่มนี้ค้างไว้ ที่วางขาจะเลื่อนลง เมื่อปล่อยปุ่มนี้ ที่วางขาจะหยุดเลื่อนลง
17		ปรับหนักฟิงขึ้น & ที่วางขาสูง	กดปุ่มนี้ค้างไว้ พนักฟิงจะยกขึ้นและที่วางขาจะลดระดับลง หากปล่อยปุ่มนี้ พนักฟิงและที่วางขาจะหยุดเคลื่อนไหว
18		ปรับหนักฟิงลง & ที่วางขาขึ้น	กดปุ่มนี้ค้างไว้ พนักฟิงจะเลื่อนลงและที่วางขาจะเลื่อนขึ้น หากปล่อยปุ่มนี้ พนักฟิงและที่วางขาจะหยุดเคลื่อนไหว
19		ไม่มีแรงโน้มถ่วง	กดปุ่มนี้เพื่อปรับตำแหน่งเก้าอี้นวดให้อยู่ในสภาวะไร้แรงโน้มถ่วง จากนั้นกดปุ่มนี้เพื่อรีเซ็ตเก้าอี้นวดให้กลับสู่สถานะการทำงานเริ่มต้น โดคอน ไร้แรงโน้มถ่วงบนอินเตอร์เฟซหลักจะแสดงสถานะไร้แรงโน้มถ่วงหลังจากการนวดเริ่มต้น

คำอธิบายกราฟิกบนจอแสดงผล LCD

อินเทอร์เฟซเปิด/ปิด



หลังจากเปิดเครื่องแล้ว หากกดปุ่ม "เปิด/ปิด" เสียงสัญญาณจะดังขึ้นสั้นๆ และชัดเจน หน้าจอ LCD จะแสดงอินเทอร์เฟซเมนูหลักและเข้าสู่โหมดสแตนด์บาย จากนั้นรีโมตคอนโทรลจะแสดงหน้าเมนูซึ่งมีตัวเลือก "อัตโนมัติ" "กำหนดเอง" "จุดลม" "ลูกกลิ้ง" "การทำความร้อน" "ตัวตั้งเวลา" "การตั้งค่า" และ "หยุด"

ฟังก์ชันการนวด

- การคลึง
- การกดจุด
- การทุบเบา
- ไร้แรงโน้มถ่วง
- การเคาะ
- การนวด
- ความเข้มข้นของการนวด
- ความเร็วของลูกกลิ้งนวด (5 ระดับ)
- ความกว้างของลูกกลิ้งนวด (แบบปานกลาง กว้าง)
- ตำแหน่งการนวด

อินเทอร์เฟซเมนู




หลังจากกดปุ่ม "เมนู" ระบบจะสลับไปที่อินเทอร์เฟซเมนูและสามารถเลือกการนวดทั้งหมดได้โดยกดปุ่มต่างๆ การกดปุ่ม "เมนู" จะออกจากรูอินเทอร์เฟซเมนูและกลับสู่อินเทอร์เฟซเปิด/ปิด การนวดอัตโนมัติ: หลังจากกดปุ่ม "เปิด/ปิด" เซอร์เซอร์จะหยุดที่โปรแกรมการนวดอัตโนมัติตามค่าเริ่มต้น กดปุ่ม "ตกลง" เพื่อเข้าสู่อินเทอร์เฟซเมนูและหน้าจอของรีโมตคอนโทรลจะแสดงโปรแกรมการนวดต่อไปนี้: "พื้นผิว" "บรรเทา" "ยึดเส้นยึดสาย" "ฟื้นฟู" "สงบ" และ "พิเศษ" ภายใต้โปรแกรมการนวด "พิเศษ" มีโปรแกรมการนวดอัตโนมัติสองโปรแกรมให้เลือก ได้แก่ "เสริมความสดชื่น" และ "เพิ่มพลังงาน"

การนวดแบบกำหนดเอง



ในอินเทอร์เฟซ "เมนู" ให้เลือกการนวดแบบกำหนดเองผ่านปุ่มนำทาง กดปุ่ม "ตกลง" แล้วตัวเลือกการทำงานที่เลือกจะปรากฏขึ้น ได้แก่ "โหมด" "ตำแหน่ง" "ระยะกว้าง" และ "ความเร็ว" หากกดเลือกตัวเลือก "โหมด" ให้กด "ตกลง" เพื่อเข้าสู่ตัวเลือกถัดไป และเลือกเทคนิคการนวดที่ต้องการ ได้แก่ การคลึง การทุบเบา การเคาะ การคลึง&การทุบเบา และการกดจุดชนิดดี หากกดตัวเลือก "ตำแหน่ง" ให้กด "ตกลง" เพื่อเข้าสู่ตัวเลือกถัดไป และเลือกส่วนของร่างกายที่ต้องการ ได้แก่ ทั้งหมด บางส่วน และเฉพาะจุด หากกดเลือกตัวเลือก "ระยะกว้าง" ให้กด "ตกลง" เพื่อเข้าสู่ตัวเลือกถัดไป และเลือกระยะกว้างของลูกกลิ้งนวดที่ต้องการ ได้แก่ แบบ กลาง และกว้าง กดเลือกตัวเลือก "ความเร็ว" กด "ตกลง" เพื่อเข้าสู่ตัวเลือกถัดไป และเลือกความเร็วที่ต้องการสำหรับลูกกลิ้งนวด ได้แก่ ระดับ 1 ระดับ 2 ระดับ 3 ระดับ 4 และระดับ 5

จุดลม

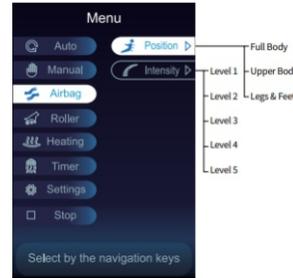

ในอินเทอร์เฟซ "เมนู" ใช้ปุ่มนำทางเพื่อเลือกตัวเลือก "จุดลม" จากนั้นในตัวเลือก "ตำแหน่ง" กด "ตกลง" เพื่อเข้าสู่ตัวเลือกถัดไป และเลือกตำแหน่งร่างกายที่ต้องการ ได้แก่ ทั้งร่างกาย ส่วนบนของร่างกาย และส่วนล่างของร่างกาย กดเลือกตัวเลือก "ความแรง" กด "ตกลง" เพื่อเข้าสู่ตัวเลือกถัดไป และเลือกความแรงของการนวดจุดลมที่ต้องการ ได้แก่ ระดับ 1 ระดับ 2 ระดับ 3 ระดับ 4 และระดับ 5

ตัวตั้งเวลา




ในอินเทอร์เฟซ "เมนู" ให้ใช้ปุ่มนำทางเพื่อเลือกระยะเวลาในการนวด กด "ตกลง" เพื่อเข้าสู่ตัวเลือกถัดไป และเลือกระยะเวลาในการนวดที่ต้องการ - 10 นาที 20 นาที และ 30 นาที ระยะเวลาในการนวดที่ถูกตั้งค่าเริ่มต้นไว้คือ 20 นาที ดังนั้นถ้าอื่นจะปิดโดยอัตโนมัติเมื่อหมดเวลา

ลูกกลิ้งนวดเท้า




ในอินเทอร์เฟซ "เมนู" ใช้ปุ่มนำทางเพื่อเลือกความเร็วของลูกกลิ้งนวด กด "ตกลง" เพื่อเข้าสู่ตัวเลือกถัดไป และเลือกความเร็วของลูกกลิ้งนวดเท้าที่ต้องการ ซึ่งได้แก่ เร็ว นุ่มนวล และหยุด

การทำความร้อน

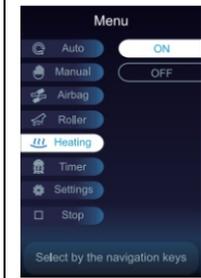


ในอินเทอร์เฟซ "เมนู" ใช้ปุ่มนำทางเพื่อเลือกฟังก์ชันความร้อนสำหรับบริเวณเอว กด "ตกลง" เพื่อเข้าสู่ตัวเลือกถัดไป และเลือกฟังก์ชันความร้อนที่ต้องการ - เปิดและปิด

การตั้งค่า

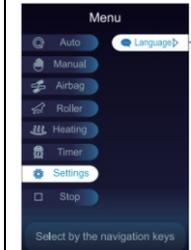

ในอินเทอร์เฟซ "เมนู" ให้ใช้ปุ่มนำทางเพื่อเลือกการตั้งค่าการนวด กด "ตกลง" เพื่อเข้าสู่ตัวเลือกถัดไป และเลือกภาษาที่ต้องการ หยุด ในอินเทอร์เฟซ "เมนู" ใช้ปุ่มนำทางเพื่อเลือกตัวเลือก "หยุด" กด "ตกลง" เพื่อหยุดโปรแกรมการนวด กดปุ่ม "เมนู" เพื่อกลับไปยังอินเทอร์เฟซ "เมนู"

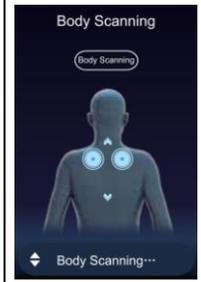

หลังจากเลือกโปรแกรมนวดที่ต้องการแล้ว เก้าอี้นวดจะเริ่มสแกนร่างกายและกล่าว "สแกนร่างกาย..." จะปรากฏบนหน้าจอของรีโมตคอนโทรล หลังจากการสแกนร่างกายเสร็จสิ้น เสียงสัญญาณจะดังขึ้น (หนึ่งครั้งทุก ๆ วินาที) เมื่อถึงจุดนี้ ลูกกลิ้งนวดจะอยู่ที่ตำแหน่งไหล่ ซึ่งสามารถกดขึ้นและลงเพื่อปรับตำแหน่งได้ เมื่อปรับลูกกลิ้งนวดแล้ว ข้อความ "กำลังปรับความสูงของไหล่..." จะปรากฏขึ้นบนหน้าจอ ระยะเวลาในการนวดเริ่มต้นคือ 20 นาที เก้าอี้นวดจะปิดและรีเซ็ตเป็นตำแหน่งตั้งตรงเมื่อการนวดเสร็จสิ้น




1		กดปุ่ม “ON/OFF” เพื่อเปิดหรือปิดเก้าอี้นวด
2		หลังจากเปิดเก้าอี้นวดแล้ว ให้กดปุ่ม “อัตโนมัติ” เพื่อเลือกโปรแกรมนวดอัตโนมัติ 3 โปรแกรมพร้อมไฟ LED แสดงสถานะสีต่างๆ: ฟันตัว บรรเทา ชีดกล้ามเนื้อ
3		หลังจากเปิดเก้าอี้นวดแล้ว ให้กดปุ่มนี้เพื่อเข้าสู่ตำแหน่งไร้แรงโน้มถ่วง กดปุ่มนี้อีกครั้งเพื่อรีเซ็ตเก้าอี้นวดให้กลับเป็นตำแหน่งตั้งตรง
4		กดปุ่มนี้ค้างไว้เพื่อให้พนักพิงหลังยกขึ้นและที่วางขาลดระดับลง ปล่อยปุ่มนี้ พนักพิงหลังและที่วางขาจะหยุดเคลื่อนไหว และเก้าอี้นวดจะอยู่ในตำแหน่งนั้นๆ
5		กดปุ่มนี้ค้างไว้เพื่อให้พนักพิงลดลงและที่วางขาขึ้น ปล่อยปุ่มนี้ พนักพิงและที่วางขาจะหยุดเคลื่อนไหว และเก้าอี้นวดจะอยู่ในตำแหน่งนั้นๆ

การเปิดเครื่อง/การปิดเครื่อง

ขั้นตอนที่ 1

การเปิดเครื่อง

- 1 เสียบสายไฟเข้ากับช่องรับกระแสไฟซึ่งระบุเป็น "a" ในแผนผัง
- 2 เสียบปลั๊กไฟเข้ากับเต้าเสียบ
- 3 กดปุ่ม "ON/OFF" ที่ปลั๊กไฟเพื่อเปิดเก้าอี้นวด
- 4 กดปุ่ม "ON/OFF" บนรีโมทคอนโทรล จะมีเสียงบีบหนึ่งครั้งและเข้าสู่อินเทอร์เฟซเมนูหลัก

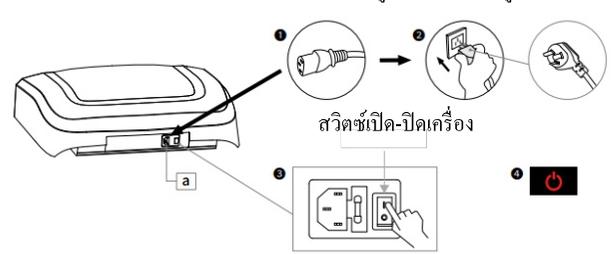

ขั้นตอนที่ 2

การนวด

- 1 เก้าอี้นวดจะทำงานตามรูปแบบการนวดที่เลือกไว้ สำหรับวิธีการนวด โปรดดูรายละเอียดเพิ่มเติมที่หน้า 16 และ 17
- 2 หลังจากการนวดสิ้นสุดลง เก้าอี้นวดจะกลับสู่ตำแหน่งเริ่มต้น และหน้าจอแสดงผลจะดับลง




รีโมทคอนโทรล

ขั้นตอนที่ 3

การปิดเครื่อง

- 1 กดปุ่ม "เปิด/ปิด" เพื่อปิดเก้าอี้นวด และเก้าอี้จะกลับคืนสู่ตำแหน่งตั้งตรงโดยอัตโนมัติ
- 2 หลังจากถูกกดปุ่มกลับสู่ตำแหน่งเริ่มต้น ให้ปิดสวิตช์ไฟที่ตัวเครื่อง
- 3 ถอดปลั๊กไฟออกจากเต้าเสียบ

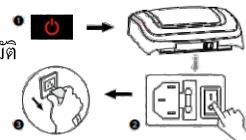

	<ol style="list-style-type: none"> 1. ก่อนใช้งาน ให้ดึงเบาะรองศีรษะ เบาะรองหลัง ฯลฯ ขึ้น เพื่อตรวจสอบว่าสวิตช์ PU เสียบหายหรือไม่ หากเสียบหาย โปรดหยุดใช้เก้าอี้นวด และติดต่อ Call center เบอร์ 1421 เพื่อให้ช่างเทคนิค Coway เข้าซ่อมแซมหรือเปลี่ยนใหม่ 2. เสียบปลั๊กเข้ากับเต้าเสียบที่ถูกต้องเท่านั้น 		<ol style="list-style-type: none"> 1. ก่อนนั่งลงโปรดตรวจสอบให้แน่ใจว่าไม่มีวัตถุใดๆ อยู่ระหว่างที่วางแขน ที่วางขา พนักพิง และที่นั่งของเก้าอี้นวด 2. ควรตรวจสอบให้แน่ใจว่าเก้าอี้นวดอยู่ในตำแหน่งตั้งตรงก่อนใช้งาน 3. ห้ามยืนบนเก้าอี้นวดขณะใช้งาน
--	--	--	---

ภาพประกอบฟังก์ชันการใช้งาน


ที่วางขาขยับขึ้น

กดปุ่มนี้เพื่อยกขาขึ้น ปลดปุ่มนี้ที่วางขาจะหยุดเคลื่อนที่และจะอยู่ในตำแหน่งนั้นๆ



ยึดและหดที่วางขา

ที่วางขาสามารถยึดหรือหดได้ในระยะ 22 ซม.




ที่วางขาเลื่อนลง

กดปุ่มนี้เพื่อเลื่อนขาลง ปลดปุ่มนี้ที่วางขาจะหยุดเคลื่อนที่และจะอยู่ในตำแหน่งนั้นๆ




การนวดแขน

ที่วางแขนมีฟังก์ชันขนาดด้วยถุงลม นิริภัยในตัว วางแขนของคุณไว้ในถุงลม นิริภัยที่วางแขนเมื่อถุงลมไม่ได้ออกตัว เมื่อถุงลม นิริภัยออกตัว แขนและฝ่ามือจะได้รับการนวด



พนักพิงปรับเอนลง & ที่วางขาขยับขึ้น

กดปุ่มนี้ พนักพิงจะเลื่อนลงและที่วางขาจะเลื่อนขึ้น ปลดปุ่มนี้ พนักพิงและที่วางขาจะหยุดเคลื่อนที่และจะอยู่ในตำแหน่งนั้นๆ



การนวดไหล่

ถุงลม นิริภัยแบบอัดขึ้นรูปหลายชั้น ถูกติดตั้งไว้ทั้งสองข้างของไหล่เพื่อบรรเทาความเมื่อยล้า



พนักพิงปรับขึ้น & ที่วางขาเลื่อนลง

กดปุ่มนี้ พนักพิงจะยกขึ้นและที่วางขาจะเลื่อนลง ปลดปุ่มนี้ พนักพิงและที่วางขาจะหยุดเคลื่อนที่และจะอยู่ในตำแหน่งนั้นๆ



การนวดเท้า

มีลูกกลิ้ง 2 ลูก และถุงลม 8 ใบ ช่วยนวดฝ่าเท้าและข้อเท้า



รีโมทคอนโทรล


กดปุ่มนี้พนักพิงจะเลื่อนลงและที่วางขาจะเลื่อนขึ้นจนกระทั่งเก้าอี้นวดเข้าสู่สภาวะรีโมทคอนโทรล โดยอัตโนมัติ กดปุ่มนี้อีกครั้ง พนักพิงและที่วางขาจะหยุดเคลื่อนที่และจะคงอยู่ในตำแหน่งนั้น




	<ol style="list-style-type: none"> 1. โปรดแน่ใจว่าไม่มีผู้คน สัตว์เลี้ยง หรือสิ่งของใดๆ อยู่รอบๆ เก้าอี้นวด เพื่อหลีกเลี่ยงการบาดเจ็บหรือความเสียหายที่ไม่คาดคิด 2. ในการปรับพนักพิงควรระวังช่องว่างระหว่างพนักพิงและที่วางแขน 3. เมื่อที่วางขาเคลื่อนขึ้นลง โปรดอย่ายืนหรือออกจากที่นั่ง 4. เมื่อที่วางขาเคลื่อนขึ้นลง โปรดอย่าฝืนที่วางขาไม่ให้เคลื่อนไหวเพื่อหลีกเลี่ยงความเสียหายต่อเก้าอี้นวด 5. โปรดดูรายละเอียดเพิ่มเติมได้ที่หน้า 15 และ 16 เกี่ยวกับคำแนะนำเกี่ยวกับรีโมทคอนโทรล
--	--

การปรับตำแหน่งเก้าอี้นวดไฟฟ้า


- 1 ตรวจสอบให้แน่ใจว่าไม่มีคน สัตว์เลี้ยง หรือสิ่งของใดๆ อยู่ในระยะของพนักพิงและที่วางขา

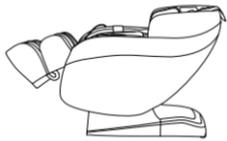

- 2 ปรับเก้าอี้นวดกลับสู่ตำแหน่งเดิมโดยกดปุ่ม “ปรับพนักพิงขึ้น & ที่วางขาลง” หรือ “ON/OFF” บนรีโมทคอนโทรล

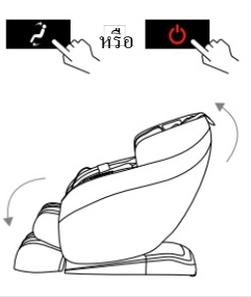


- 3 ใส่รีโมทคอนโทรลกลับเข้าไปในช่องใส่รีโมทคอนโทรลหลังจากที่เก้าอี้นวดกลับสู่ตำแหน่งเดิมแล้ว

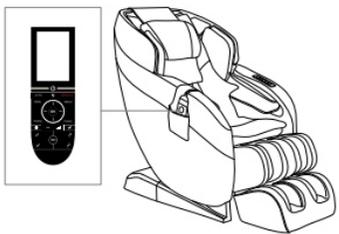

- 4 ปิดเครื่อง



- 5 ถอดปลั๊กไฟออกจากเต้าเสียบ (ข้อควรระวัง: เสียบปลั๊กไฟให้ถูกต้องตำแหน่ง)

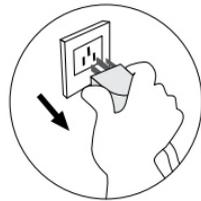

- 6 ทำความสะอาดเก้าอี้นวดหากจำเป็น

⚠ ATTENTION!

- หลังใช้งาน ให้กดปุ่ม “เปิด/ปิด” เพื่อสิ้นสุดโปรแกรมการนวดทั้งหมดและรอการคืนค่าโปรดปิดเครื่องเพื่อหลีกเลี่ยงการบาดเจ็บที่ไม่คาดคิดต่อเด็กหรือสัตว์เลี้ยง
- หลังใช้งานแล้วให้ปิดเครื่องและถอดปลั๊กไฟเพื่อป้องกันความชื้น สิ่งสกปรก และการเสื่อมสภาพของฉนวนไฟฟ้าในกรณีที่สามารถทำให้เกิดความเสียหาย


หนังสังเคราะห์

การทำความสะอาดโดยทั่วไป

ทำความสะอาดเก้าอี้นวดด้วยผ้านุ่มและแห้ง




ห้ามใช้ทินเนอร์, น้ำมันเบนซิน, แอลกอฮอล์หรือสารเคมีอื่นๆ

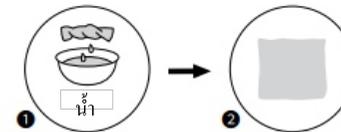

หากหนังสกปรก


- 1 ใช้ผ้าเนื้อนุ่มจุ่มน้ำ บิดหมาดแล้วเช็ดคราบสกปรกบนพื้นผิวเบาๆ
- 2 ชักผ้า บิดหมาดแล้วเช็ดอีกครั้ง
- 3 ทำความสะอาดด้วยผ้าแห้งนุ่มๆ
- 4 ปลดปล่อยให้แห้ง (ห้ามใช้ไดร์เป่าผม)

วัสดุที่เป็นผ้า

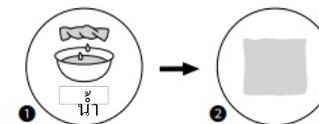


- 1 ใช้ผ้าเนื้อนุ่มจุ่มน้ำ บิดหมาดแล้วเช็ดคราบสกปรกบนพื้นผิวผารอบ ห้ามใช้ทินเนอร์, น้ำมันเบนซิน, แอลกอฮอล์ หรือ สารเคมีอื่นๆ
- 2 ปลดปล่อยให้แห้ง

ชิ้นส่วนพลาสติก

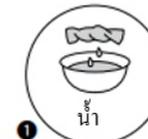

- 1 ใช้ผ้าเนื้อนุ่มจุ่มน้ำ บิดหมาดแล้วเช็ดคราบสกปรกบนชิ้นส่วนพลาสติก
- 2 ปลดปล่อยให้แห้ง

การทำความสะอาดรีโมทคอนโทรล

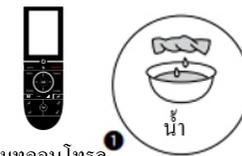

รีโมทคอนโทรล

- 1 เช็ดรีโมทคอนโทรลด้วยผ้านุ่มๆ หลังจากใช้ผ้าเนื้อนุ่มจุ่มลงในน้ำและบิดหมาด
- 2 ปลดปล่อยให้แห้ง

ห้ามใช้ทินเนอร์ น้ำมันเบนซิน แอลกอฮอล์ หรือ สารเคมีอื่นๆ

เกี่ยวกับการทำความสะอาดเก้าอี้นวด



- ก่อนทำความสะอาดให้ถอดปลั๊กออกและอย่าสัมผัสปลั๊กขณะมือเปียก
- ตรวจสอบให้แน่ใจว่ามีมือแห้งเมื่อจะเสียบปลั๊กเข้ากับเต้าเสียบ
- หากไม่ปฏิบัติตามคำแนะนำข้างต้น ผู้ใช้อาจถูกไฟช็อตหรือได้รับบาดเจ็บได้

คำถามที่พบบ่อยและการแก้ไขปัญหา

ปัญหา/ประเด็น	สาเหตุที่อาจเป็นไปได้	การแก้ไข
แก้อี้นวดไม่ทำงาน หลังจากเปิดเครื่อง	สวิตช์ปิดเปิดด้านล่างไม่ได้เปิดอยู่	เปิดสวิตช์ปิดเปิด (ดูหน้า 21)
	อาจยังไม่ได้เลือกโหมดการนวด	เลือกโปรแกรมนวดใดก็ได้เพื่อเริ่มการนวด
	ปลั๊กไฟไม่ได้เชื่อมต่อกับเต้าเสียบอย่างถูกต้อง	ตรวจสอบให้แน่ใจว่าปลั๊กและเต้าเสียบมีการเชื่อมต่อ
	สายไฟหรือปลั๊กได้รับความเสียหาย	กรุณาติดต่อ Call center เบอร์ 1421
	ฟิวส์ของแก้อี้นวดไฟฟ้าขาด	กรุณาติดต่อ Call center เบอร์ 1421
วงจรภายในมีปัญหา	กรุณาติดต่อ Call center เบอร์ 1421	
ภายในแก้อี้นวดจะมีเสียงบีบขณะใช้งาน	อาจได้ยินเสียงบีบลม มอเตอร์ หรือชิ้นส่วนเครื่องจักรกล	เป็นเรื่องปกติ
ตำแหน่งของลูกกลิ้งซ้ายและลูกกลิ้งขวาแตกต่างกัน	ลูกกลิ้งนวดไม่ได้ทำงานสมมาตรเสมอไป	เป็นเรื่องปกติ ท่านสามารถหยุดการนวดและเริ่มการนวดใหม่เพื่อให้ลูกกลิ้งนวดทำงานแบบสมมาตร
เสียงดังมากขึ้นทันทีขณะใช้งาน	อาจเกิดจากการใช้งานแก้อี้นวดอย่างต่อเนื่องเป็นเวลานาน	ปิดเครื่องเพื่อให้แก้อี้นวดได้พักประมาณหนึ่งชั่วโมงก่อนเปิดเครื่องอีกครั้ง
	ชิ้นส่วนภายในอาจสึกหรอหลังจากใช้แก้อี้นวดอย่างต่อเนื่องเป็นเวลานาน	กรุณาติดต่อ Call center เบอร์ 1421 เพื่อให้ช่างเทคนิค Coway ตรวจสอบและ/หรือเปลี่ยน
โปรแกรมหยุดกะทันหันขณะใช้งาน	การเชื่อมต่อไฟไม่ดี	เสียบปลั๊กไฟอีกครั้ง
	การตั้งเวลาโปรแกรมอัตโนมัติเสร็จสิ้นแล้ว	ปิดเครื่องเพื่อให้แก้อี้นวดได้พักประมาณหนึ่งชั่วโมงก่อนที่จะเปิดเครื่องอีกครั้ง
พนักพิงและที่วางขาไม่สามารถปรับองศาได้	ตรวจสอบว่ามีวัตถุใดๆ อยู่รอบๆ แก้อี้นวดหรือไม่ หรือแก้อี้นวดรับน้ำหนักมากเกินไปหรือไม่ บางครั้งแก้อี้นวดอาจหยุดทำงานโดยอัตโนมัติเพื่อเหตุผลด้านความปลอดภัย	เอาวัตถุออกและปิดเครื่องเพื่อให้แก้อี้นวดได้พักประมาณหนึ่งชั่วโมงก่อนที่จะเปิดเครื่องอีกครั้ง
แก้อี้นวดไม่สามารถกลับสู่ตำแหน่งเดิมได้	แก้อี้นวดทำงานหนักเกินไป หมดเวลาที่ตั้งไว้แล้ว	กรุณาติดต่อ Call center เบอร์ 1421 เพื่อให้ช่างเทคนิค Coway ตรวจสอบและ/หรือเปลี่ยน
สายไฟหรือปลั๊กร้อนเกินไป	อาจทำงานหนักเกินไป	ปิดเครื่องเพื่อให้แก้อี้นวดได้พักประมาณหนึ่งชั่วโมงก่อนเปิดเครื่องอีกครั้ง
	ความผิดปกติอื่นๆ	หยุดใช้แก้อี้นวดและติดต่อ Call center เบอร์ 1421 เพื่อให้ช่างเทคนิค Coway ตรวจสอบและ/หรือเปลี่ยน



หมายเหตุ: หากปัญหาของท่านไม่ได้มีการระบุไว้ข้างต้น โปรดปิดแหล่งจ่ายไฟและติดต่อ Call center 1421 เพื่อให้ช่างเทคนิค Coway เข้าให้ความช่วยเหลือ

ข้อมูลทางเทคนิค

ชื่อ	แก้อี้นวดไฟฟ้า Coway
รุ่น	MC-S01B/MC-S01W
แรงดันไฟฟ้าขาเข้า	220-240V ~ 50/60Hz
รูปแบบความปลอดภัย	ระดับ 1
กำลังไฟฟ้า	180 วัตต์
น้ำหนักสุทธิ/ น้ำหนักรวม	84 กก./100.5 กก.
ขนาดบรรจุ	1160 × 770 × 1265 มม. (ยาว × กว้าง × สูง)

Warranty

- เงื่อนไขและระยะเวลาการรับประกันสินค้าให้เป็นไปตามที่กำหนดไว้ในเอกสารการซื้อหรือตามที่ได้ตกลงกันไว้ในสัญญาโปรดทราบว่าข้อกำหนดการรับประกัน ผลิตภัณฑ์ของเรานั้นอาจมีการเปลี่ยนแปลงเพื่อปฏิบัติตามกฎหมายและกฎระเบียบที่เกี่ยวข้องของประเทศไทย
- <https://www.coway.co.th/th/terms-of-conditions>

ประเทศไทย

ที่อยู่ : บริษัท โควเวย์ (ประเทศไทย) จำกัด (สำนักงานใหญ่)
75/104-106 อาคาร โอเชียนทาวเวอร์ 2 ชั้น 38 ซอยสุขุมวิท19 (วัฒนา) ถนนสุขุมวิท แขวง
คลองเตยเหนือ เขตวัฒนา กรุงเทพฯ 10110
คอลเซ็นเตอร์ : 1421

MASSAGE CHAIR

COWAY

MC-S01B/MC-S01W




เครื่องวิthyคมนาคนนี่ ใต้รับยกเว้น ไม่ต้องได้
รับใบอนุญาตให้มึ ใช้ซึ่งเครื่องวิthyคมนาคน
หรือตั้งสถานีวิthyคมนาคนตามประกาศ กสทช.
เรื่อง เครื่องวิthyคมนาคน และสถานีวิthy
คมนาคนที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาต
วิthyคมนาคนตามพระราชบัญญัติวิthyคมนาคน
พ.ศ. 2498



nans. | โทรคนบอก

กำกับดูแลพื่อประเชน

Call Center 1200 (InswS)

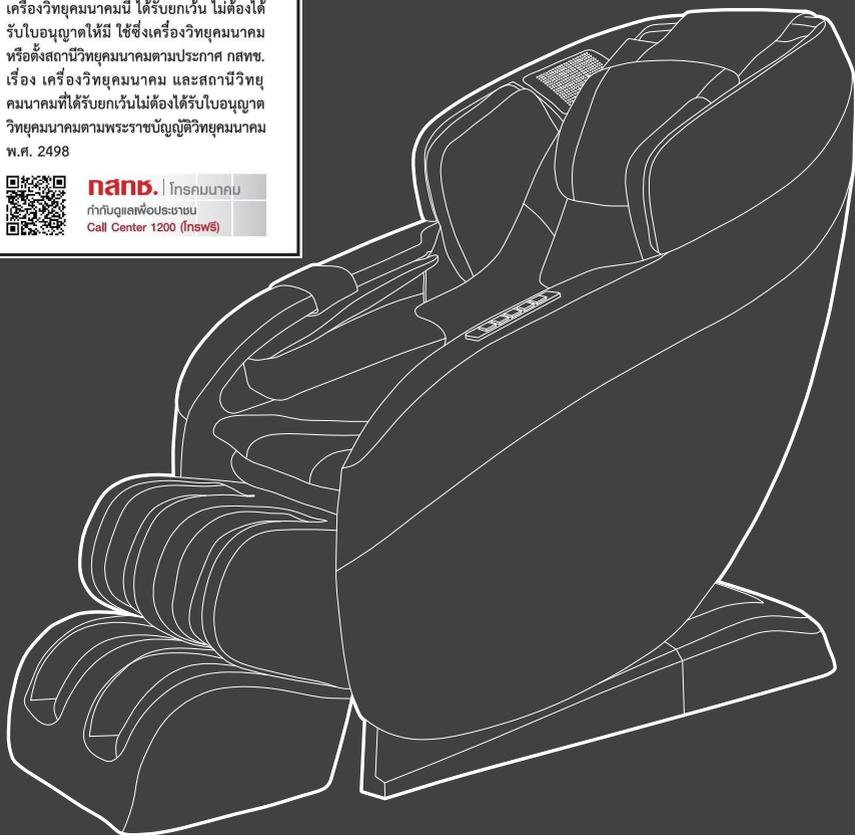

USER MANUAL ►

Please read **SAFETY INSTRUCTIONS** carefully before using the chair.

MESSAGE CHAIR MC-ST01B

PRODUCT FEATURES

1. This massage chair has been modified for a quiet massage feeling, which comes with a variety of massage techniques such as kneading, knocking, tapping, shiatsu and kneading-tapping that mimics a real massage therapist's technique.
 2. It has the feature of body scanning which can precisely massage your body based on different heights and sizes.
 3. The purpose of elderly-friendly buttons is to provide convenience and enable users to experience the real zero gravity feature with just one touch.
 4. With space-saving technology, you only need 5cm of free space between the massage chair and the wall to enjoy your massage with limited space.
 5. With the combination of massage rollers and airbags on the feet, it stimulates the reflex zones of the feet which can unclog the meridians and regulate the joints.
 6. With the additional of 4 massage rollers and airbags on the calves, it provides the benefits of relieving muscle tightness, improving blood circulation and flexibility.
 7. The air compression massage helps to increase blood circulation and improve the lymphatic system.
 8. The leg rest can be extended and retracted within the range of 22cm which is suitable for users below 100kg and between 155cm to 185cm.
 9. With the elderly-friendly buttons on the armrest and high-resolution LCD screen on the remote control, you can easily operate the massage settings.
 10. This massage chair has a built-in Bluetooth speaker which allows you to play music from any devices via Bluetooth connection.
 11. With the combination of massage techniques and heat therapy, it helps to improve blood circulation and ease back pain.
 12. With a hidden USB port at the left armrest, you may charge your phone while enjoying the massage.
- ◆ 1. Thank you for choosing Coway Massage Chair.
2. Please read this manual carefully before use.
 3. Please keep this manual in a safe place for further reference.
 4. Please pay attention to SAFETY INSTRUCTIONS.

Note: We reserve the right for any design modification. It is subject to change without notice.
The images in this user manual are only illustrated for reference. Please refer to the actual product.

CONTENT

Preparation	
Safety Instructions	4
External Structure	8
Internal Structure	9
Installation	
Installation	10
Preparation Before Using	
Surrounding Environment	14
Moving Methods, Adjustment Before Massage	15
Massage Operation	
Remote Control	16
LCD Display Graphic Descriptions	18
Elderly-Friendly Buttons	20
Operation Instruction and Function Illustration	
ON/OFF	22
Function Illustration	23
After Massage	
Restoration of Massage Chair	24
Clean and Maintenance	
Cleaning and Maintenance	25
Others	
FAQ and Troubleshooting	26
Technical Data	27

Please keep this manual in a safe place for future reference.

SAFETY INSTRUCTIONS

- ◆ • “Safety Instructions” is provided in both Warning and Caution for important safety information.
- ◆ • Please read all the instructions before using this massage chair.

 WARNING	This sign indicates a hazardous situation which may result in possible death or serious injury.
 CAUTION	This sign indicates a potentially hazardous situation which may result in minor or moderate injury.

Symbol Meaning

	This sign indicates the forbidden behavior.		This sign indicates self-disassembly is forbidden.
	This sign indicates the instruction that must be followed to operate massage chair.		This sign indicates proper operation for the cable.

- ◆ • The followings should be kept for further references.

 WARNING	
	<ul style="list-style-type: none"> • Unsuitable for users with osteoporosis, vertebral fractures, and acute painful diseases such as sprains or muscle strains. • Unsuitable for cardiac patients (including those who have pacemakers or are using other medical electronics). • Unsuitable for cancer patients. • Unsuitable for users with perceptual disorders due to high levels of peripheral circulatory disturbances such as diabetes. • Unsuitable for users with scoliosis. • Unsuitable for users with prolapsed (herniated) disc. • Unsuitable for pregnant women, women who have just delivered baby, and users who are in poor health conditions. • Unsuitable for users with trauma, such as thrombosis, acute varices, and various skin inflammations. • Suggest not to use for users who have thermoregulatory disorders and illnesses related to heat. • Suggest not to use for users with high fever (acute inflammation: such as burnout, chills, blood pressure changes, physical weakness). • Suggest not to use for users who are aged 80 and above. • Suggest not to use for users with impaired consciousness, mentally handicapped, and incapable to operate massage chair. • Suggest not to use for users with physically incapable to take care of themselves, such as infants. • Do not use this massage chair with wet hands. • Do not use this massage if you are sensitive or allergic to heat. • Do not fall asleep on this massage chair. <p>People with above symptoms should not use massage chair or use them under doctor's advice. User's discretion is advised.</p>
	Risk of causing accident or body discomfort.

 WARNING		
	<ul style="list-style-type: none"> • Before sitting, please confirm that there are no foreign matters in between the parts of massage chair. • When using the backrest, calf up and down, or calf extension, be sure to check that there are no people or objects in these areas (behind, under, or in front of the massage chair). • In the event of a physical abnormality or abnormality in use, stop using it immediately and seek for doctor's advice. • Pay attention to the movement of massage rollers around the head and neck as it should not be too much pressure on it. • Avoid excessive neck massage. • Do not massage the abdomen or knees with this massage chair. • Stop the massage before you leave the seat or if you want to leave the seat. • Do not use it with other instruments. • Do not allow children or pets to play on or around the massage chair (especially in use); nor can they sit or stand on backrests, armrests or leg rest. • Before moving the massage chair, the backrest and leg rest must be angled back to their original position. 	Accident / injury.
	<ul style="list-style-type: none"> • When assembling, turn off the switch and unplug it after the massage chair returns to its original position. • Insert the power plug into the power cord socket. • Make sure the power plug is completely inserted into the power cord socket to reduce the risk of electrification, short circuits or fire. • Unplug the power plug when the massage chair is not in use. • Turn the power switch OFF and unplug the power cord in times of power shortages. 	Fire and electric shock.
	<ul style="list-style-type: none"> • It is not allowed to fold the cushions of the massage chair for storage. • It is forbidden to conduct no-load running on the massage chair for a long period of time. • This appliance should never be left unattended when plugged in. • Do not use the massage chair if the power cord, plug, or socket is broken or when the receptacle is loose. • Do not use the massage chair other than on the designated voltage. • Do not use the massage chair if the power cord and plug are damaged or not working. • Do not place heavy items on the power cord. • Do not bend, pull, twist, or tie the power cord. • Avoid placing the power cord in places susceptible to high temperatures, such as too close to heating appliances. 	Accident. Fire and electric shock.
	<ul style="list-style-type: none"> • If the massage chair is faulty, damaged, splashed or dropped, please contact Coway Logistic Technician to repair it. • If power cord or plug is damaged, please do not replace it by yourself. Please contact a Coway Logistic Technician for replacement. • To avoid electric shock or injuries, please do not open or disassemble any parts of the massage chair. Please contact a Coway Logistic Technician to repair it. • If the leather or cushion of massage chair is broken, please stop using the chair and contact a Coway Logistic Technician to repair it. 	Disassembly and maintenance.

 CAUTION		
	• Please operate the massage chair on a flat or level surface.	To avoid sudden falling.
	• The recommended maximum massage duration is 20 minutes. Continual usage on the same body part may cause an uncomfortable feeling.	Too long time massage is bad for your body.
	• To avoid injury, please check everything to ensure that the head in the correct massage position.	To avoid accidental injury.
	• Remote control should be kept in the remote control pocket to avoid being crushed or falling damage.	
	• Please make sure that the power switch is “OFF” before inserting the power plug into the power cord socket.	
	• Turn off all controls before removing the power plug from outlet.	To avoid accidents when turning on the power switch.
	• Make sure the power plug is completely inserted into the power cord socket.	To reduce short circuits and any fire hazard.
	• Please check whether there are any damages to the wire to ensure there is no debris or water on the wire.	To avoid electric shock in any leakage or breakdown.
• Connect the earth wire in the correct way. The power plug must be inserted into the outlet with an earth wire, and the earth wire must not be bent or cut off. 		
	• Do not press the massage rollers with hands or feet.	To avoid accidents or injuries.
	• Do not put hands between the armrests or airbags.	
	• Do not put hands or feet in the gap of mechanical parts.	
	• Do not drop or embed anything into the slot of massage chair.	
	• Do not stand or sit or put anything on the backrest, armrest or leg rest.	
	• Do not move the massage chair during operation.	
	• Do not stand on the massage chair during operation.	
	• Do not pull out the power plug or turn off the power during operation.	
	• Do not put your hands or head between leg-rest or beneath.	
	• Do not use the massage chair whilst wearing hard objects on the head, such as hair ornaments.	
• Do not put hard objects in pockets for thigh or hip massage.		
• Do not sit or press on the backrest when the massage chair is in reclining position.		
• Do not use the massage chair with bare skin to avoid skin irritation or cryogenic burns.		
• To avoid getting tangled with the massage chair, please do not wear loose clothing or jewellery while using it.		
• To avoid getting tangled with the massage chair, please tie your hair up and keep your long hair away from moving parts.		
	• Keep the massage chair away from heated surfaces, damp places, sharp objects, corrosive chemicals, inflammable and explosive environments.	To avoid colour fading, discoloration or deterioration of the massage chair leather.
	• Do not use electric blanket or other heating products on the massage chair.	
	• Keep the massage chair away from stove or other heating products.	
	• Keep the massage chair away from dust.	
	• Do not put the massage chair directly exposed to sunlight or in places susceptible to high temperature.	
	• Do not put the massage chair in a small space.	
• Do not use the massage chair in a poor air circulation space.		
• Do not use the massage chair outdoors.		


 CAUTION		
	<ul style="list-style-type: none"> Do not place or store the massage chair in the places, such as swimming pool, or bathroom. Please make sure the massage chair and remote control are kept dry all the time. Do not use the massage chair if user's body is wet. 	To avoid electric shock.
	<ul style="list-style-type: none"> Please make sure to connect the earth wire in the correct way to avoid electric shock. If you do not know how to connect, please find Coway Logistic Technician. Do not use plug adapters (If the plug does not match the socket, please do not change the plug by yourself and find Coway Logistic Technician to install a matching socket.) 	To avoid electric shock.
	<ul style="list-style-type: none"> Unplug the power before cleaning the massage chair. Unplug the power when not using the massage chair. 	To avoid electric shock or fire hazard.
	• Unplug the power if there are any damages on the power supply.	
	• Hold the plug to unplug the power cord.	
	• Please turn the power switch “OFF” and unplug the power cord after massaging.	To avoid accidents.
	• Please turn the power switch “OFF” and unplug the power cord in times of power shortages.	To avoid damages or accidents when the power is switched on again.

GROUNDING INSTRUCTION

- ✦ ✖ The massage chair is equipped with a power cord having a grounding conductor. The plug must be inserted into an appropriate power socket for the massage chair to function.



REPLACE FUSE

- ✦ ✖ When the fuse is burned out, please contact Careline or Coway Logistic Technician to repair it.

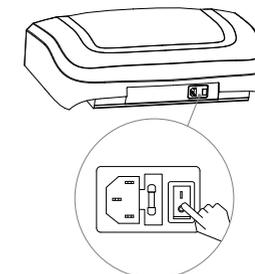


	<p>Gas pipe: might cause explosion or fire.</p> <p>Phone wire and lightning rod: might cause electric shock and fire when thundering.</p> <p>Water pipe: earth wire is useless where there are plastics.</p>
Earth wire is not allowed to be stored in these places.	

EXTERNAL STRUCTURE

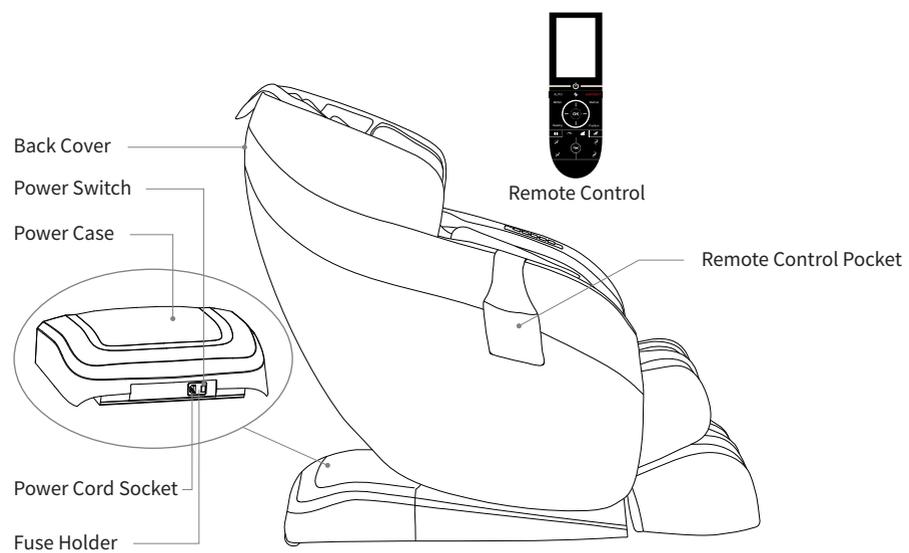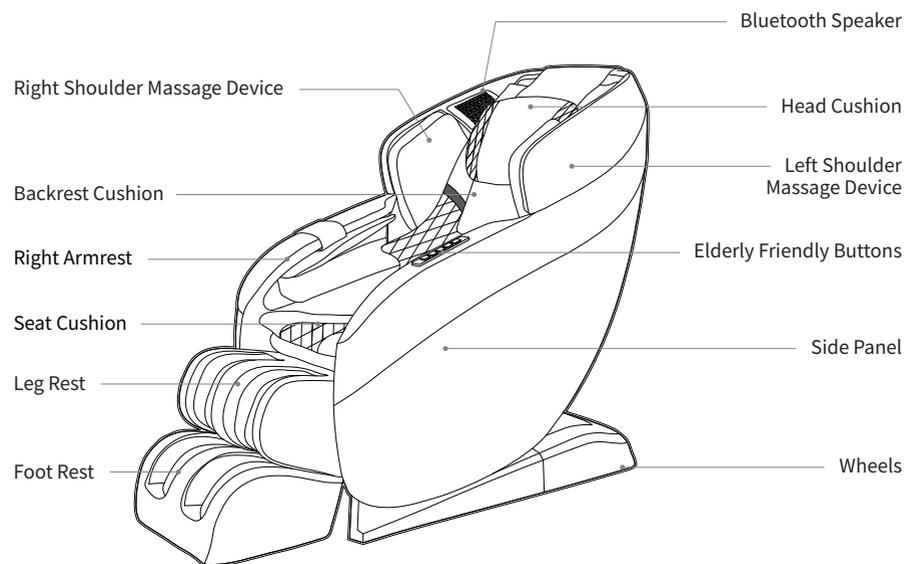

INTERNAL STRUCTURE

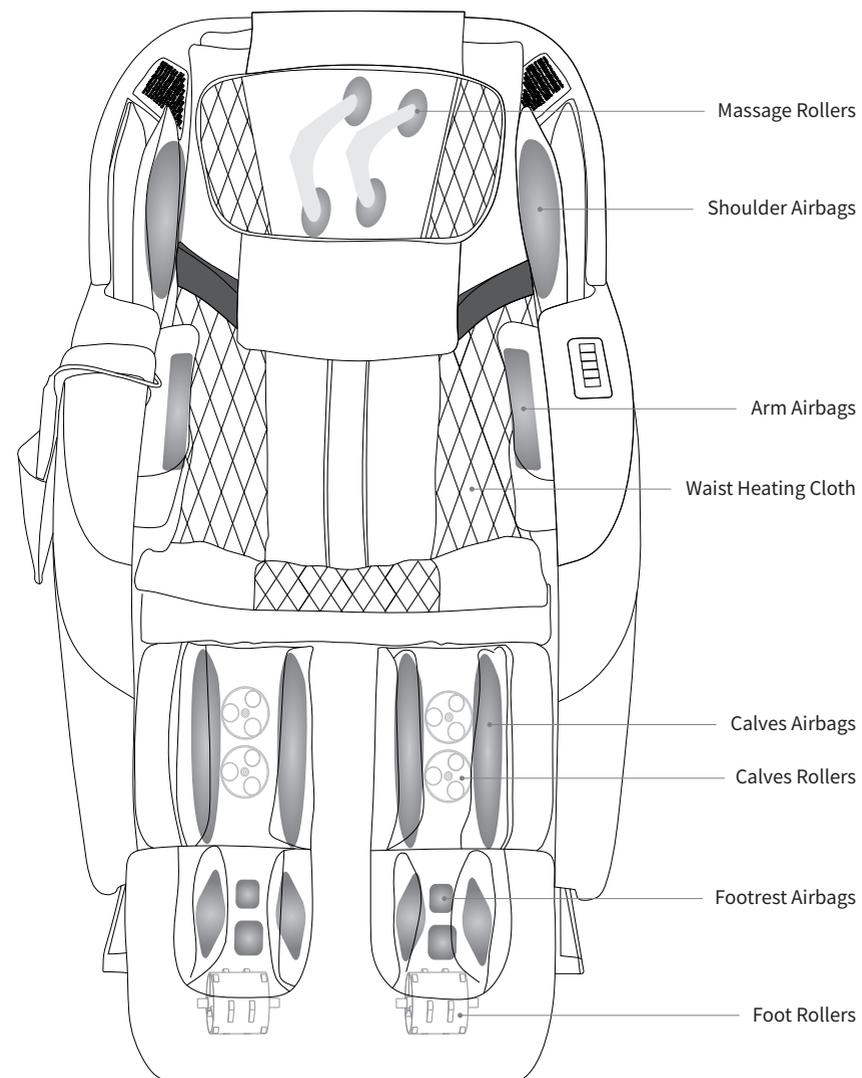


INSTALLATION

STEP 1


Take out the main body and accessories from the carton box.

- ❶ Take out the accessory box and the leg rest.
- ❷ Carry out the main body of the massage chair.
- ❸ Check and confirm all the accessories.


Take out the leg rest from the carton box by holding left and right sides of the leg rest.

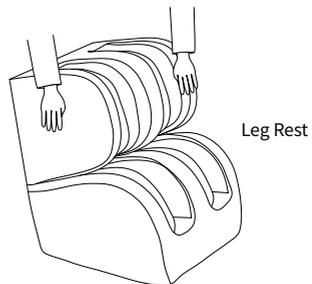

Massage Chair Main Body

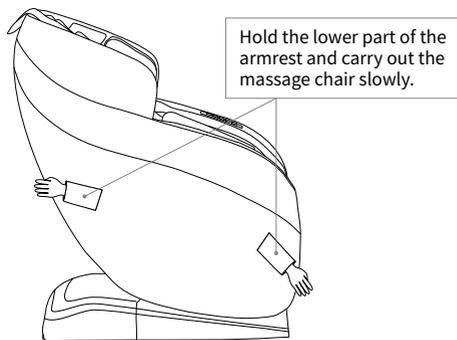

The Accessories



Electric Power Cable




User Manual

STEP 2


Place the remote control into the remote control pocket.

- ❶ Remove the remote control pocket from the right side inner arm airbags.
- ❷ Put the remote control into the remote control pocket.

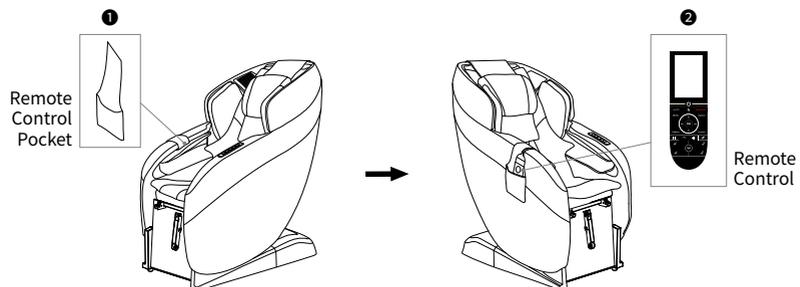

CHECK ENVIRONMENT

Make sure there is sufficient space for inclination.

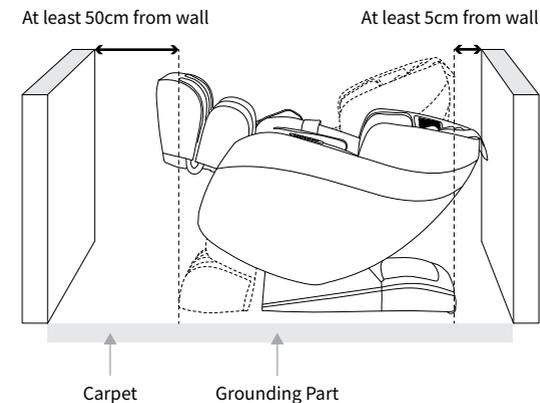

Due to the heavy weight of massage chair, please put a mat, rug, carpet or soft paddings to protect your floor.

CAUTION

- Do not place the massage chair in wet places such as swimming pool and bathroom to avoid leakage or electric shock.
- Do not place the massage chair under the sun to avoid upholstery deterioration, colour fading, and discoloration.
- Do not place the massage chair near to the stove or other heating places to avoid upholstery deterioration.
- Please place the massage chair in a flat surface to avoid massage chair from falling or other unexpected incidents.


STEP 3

Fix the leg rest.

- ❶ Place the rear of leg rest near in front of massage chair.
- ❷ Pair the leg and foot harness plug with the socket on the main body and air tube plug on the main body.
- ❸ Raise the leg rest with both hands, push the shaft of leg rest toward the level pin of the hangers and lock it to the main body.
- ❹ Paste the Velcro of the leg rest with the seat cushion.



Note: The shaft must be securely attached, otherwise it will fall off. When inserting the air tube plug and wiring harness, do not wrap the air pipe and wiring harness together.

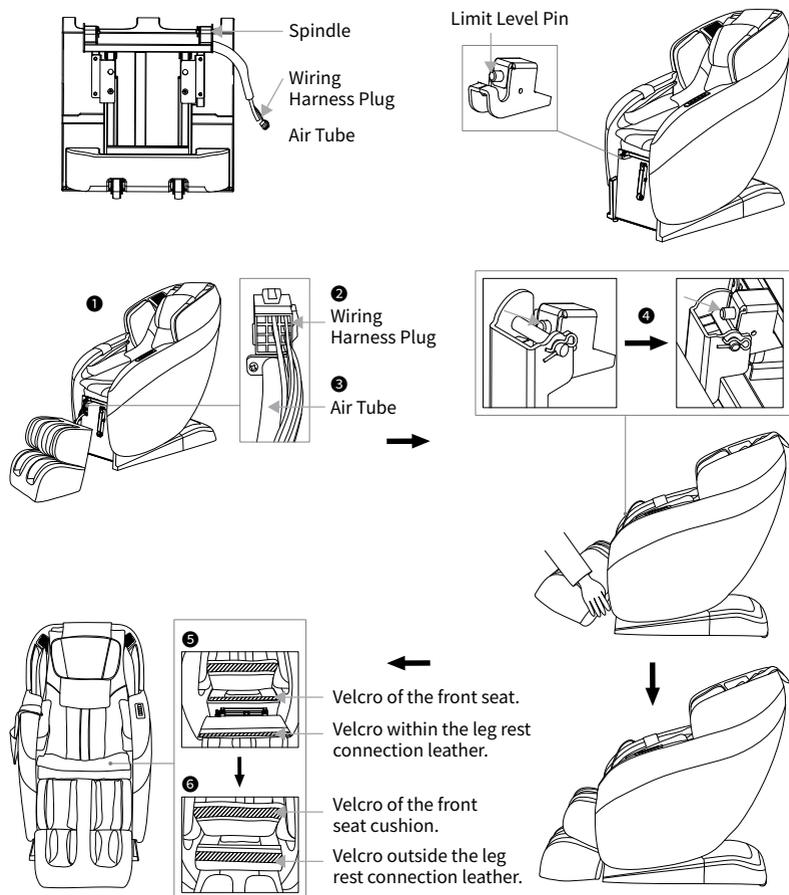
**STEP 4**

After assembling.

- ❶ Insert the cable line into the socket.
- ❷ Turn on the switch behind the power box (switch "ON/OFF", "O/I", press "I" to turn it on).
- ❸ Use the remote control to choose the massage programs that you want.



Make sure the switch is OFF before inserting the cable line into the socket.

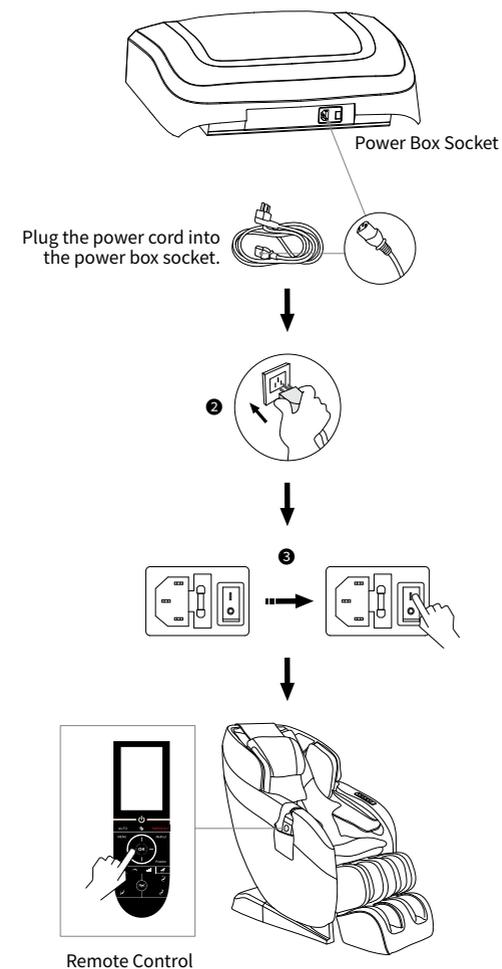

SURROUNDING ENVIRONMENT

CAUTION



Do not place the massage chair in wet places such as swimming pool and bathroom to avoid leakage or electric shock.




Do not place the massage chair under the sun, near to the stove or other heating places to avoid upholstery deteriorated.



Please place the massage chair on a flat surface to avoid massage chair from falling or other unexpected incidents.


Check Surrounding Areas

- Check the front and back areas of massage chair to ensure there are no people, pets or other objects around.

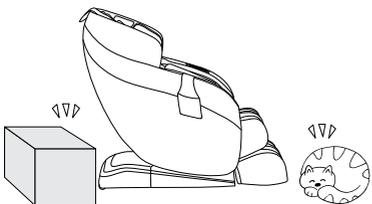


Check Power Cable and Plug

- Use dry cloth to clean the dust on plug regularly.
- Do not bend, pull, twist, or tie the power cord.

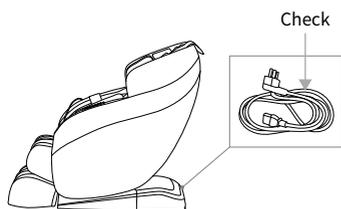

Available Space To Place The Massage Chair

Make sure the distance between the backrest and the wall has at least 5cm.


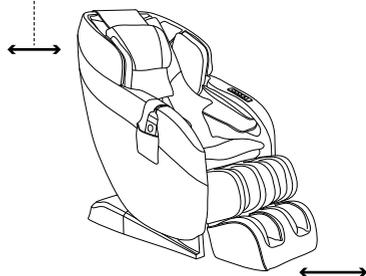


Make sure the distance between the leg rest and the wall has at least 50cm.

Check The Surroundings

When the backrest or leg rest reclines or extends, please take note on:

- Check if there is any person, pets, or objects around the massage chair.
- Check the space size.

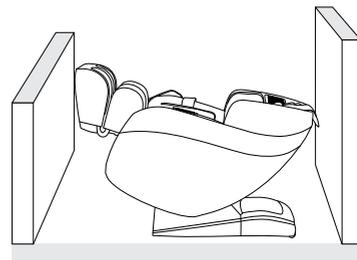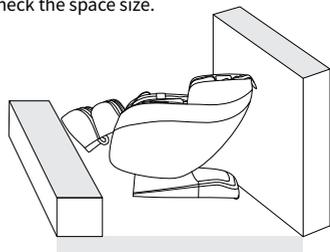


MOVING METHODS

CAUTION

- Do not move the massage chair when it is working to avoid any accidents or damages.

Floor Protection

- Bind the cables and put them on the seat to avoid damage while moving the massage chair.
- Do not drop or let go of the massage chair out of a sudden while moving the massage chair.
- Do not move the massage chair on a wooden floor, rough surface or in a narrow space.
- Do not move the massage chair without the assistance of Coway Logistic Technician.
- Make sure to turn off the power switch and unplug the cable before moving the massage chair.



Moving The Massage Chair

Press down on the head part so that the chair falls backwards and stands on its back castors. Then, push the massage chair to desired destination steadily and set it down slowly.




Please hold the footrest while moving the massage chair to protect the leather from scratches.

To carry this product, please do not lift the armrest.

ADJUSTMENT BEFORE MASSAGE

Before Adjustment

- Make sure the massage rollers stop at the upper part of backrest. Then, you may slowly sit on the massage chair to enjoy the massage.

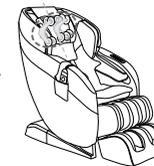

- The wrong position of rollers might cause injuries.

If the massage roller cannot detect the shoulder position, it will default the massage rollers to the highest position of the user's shoulder.


Right position:

Rest your back on the backrest and your head on the head cushion. The massage chair will release three "beep" sounds after the shoulder detection has finished. To make slight adjustments, you may press "UP/DOWN" button on the remote control.




- A wrong detection of the user's shoulder position may affect the massage comfort.

Recommendation

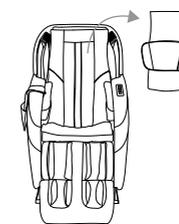

If you feel the massage intensity is not strong enough, you may remove the head cushion.

Due to the heavy weight of massage chair, it may ruin your floor in a long period of time. Please put a mat, rug, carpet or soft paddings to protect your floor.

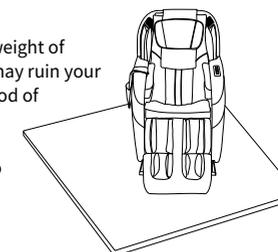

REMOTE CONTROL



1		ON/OFF	Press this button to start or stop the massage program.
2		AUTO Massage	Press this button to select three automatic massage program options of "Recover", "Relief", and "Stretch". The default operating time is 20 minutes.
3		Air Pressure	Press this button to select a full-body air pressure massage which includes upper body and lower body parts.
4		EMERGENCY	Press this button to stop all massage functions and only can select "ON/OFF" button to resume the massage chair.
5		Menu	Press this button to switch the screen of remote control to the menu interface. You can select the massage program by pressing "AUTO" selection, then the navigation buttons (UP, DOWN, LEFT, RIGHT) and the "OK" button to confirm the massage program. The other massage settings will also appear after pressing the "MENU" button.
6		Method	Press this button to select 5 different massage methods which include kneading, tapping, knocking, shiatsu and kneading & tap.
7		Heating	Press this button to turn "ON" and "OFF" for heating function on waist area. When the heat is turned on, the corresponding heating symbol will turn red. When the heat is turned off, the corresponding heating symbol will disappear.
8		Position	When the massage chair is in the manual massage mode, press this button to select the body part massage options of "Whole", "Partial" and "Point".
9		Navigation Buttons	Press the navigation buttons (UP, DOWN, LEFT, RIGHT) to be used as menu navigation buttons in the menu mode. You can use "UP" and "DOWN" buttons to quickly select the menu items and "LEFT" and "RIGHT" buttons to quickly enter the previous and next menus. The "UP" and "DOWN" buttons play the role of manually adjusting the position of the massage chair during the shoulder height detection and the fixed-point adjustment function in the manual massage mode.
10		OK - Confirm Button	Press this button to confirm the selection of menu items and pop up the next menu.
11		Width of Massage Rollers	Press this button to adjust the width of massage rollers which are "Narrow", "Middle" and "Wide" during the operation of manual tapping, knocking and shiatsu.
12		Intensity of Airbags	Press this button to adjust 5 different levels of intensity of airbags massage.
13		Speed of Massage Rollers	Press this button to adjust 5 different speeds of massage rollers under the manual massage state.
14		Foot Roller	Press this button to adjust 3 different speeds of "Quick", "Soft" and "Stop" on foot rollers in sequence.
15		Leg Rest Up	Press and hold this button, then the leg rest will rise. The leg rest will stop rising after releasing this button.
16		Leg Rest Down	Press and hold this button, then the leg rest will descend. The leg rest will stop descending after releasing this button.
17		Backrest Up & Leg Rest Down	Press and hold this button, the backrest will go up and the leg rest will go down. If release this button, the backrest and leg rest stop moving.
18		Backrest Down & Leg Rest Up	Press and hold this button, the backrest will go down and the leg rest will go up. If release this button, the backrest and leg rest stop moving.
19		Zero-Gravity	Press this button to adjust the massage chair position to zero gravity. Then, press this button to reset the massage chair to the initial working state. The zero gravity icon on the main interface will show the zero gravity status after the massage starts.


LCD DISPLAY GRAPHIC DESCRIPTIONS

ON/OFF INTERFACE



After powering on, if you press the "ON/OFF" button, the buzzer will ring with a short and crisp sound. The LCD screen will display the main menu interface and enter a standby mode. Then, the remote control will display the MENU page which has the selections of "Auto", "Manual", "Airbag", "Roller", "Heating", "Timer", "Settings", and "Stop".

Message Function

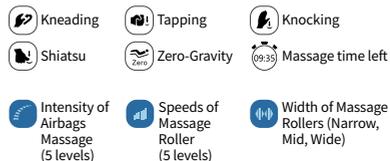

MENU INTERFACE



After pressing the "Menu" button, it will switch to the menu interface and all the massage selections can be chosen by pressing the buttons. Pressing the "Menu" button will exit the menu interface and return to ON/OFF interface.


Auto Massage: After pressing the "ON/OFF" button, the cursor will stop at the Automatic massage program by default. Press "OK" button to enter the menu interface, and the screen of remote control will display the following message programs: "Recover", "Relief", "Stretch", "Renew", "Calming" and "Special". Under "Special" message program, there are two automatic massage program available which are "Refresh" and "Energy".

Refresh
Energy


MANUAL MESSAGE



On the "Menu" interface, select manual message through the navigation button. Press "OK" button and four functional options will be presented which include "Mode", "Position", "Width" and "Speed". If you select "Mode" option, press "OK" to enter the next option, and select the desired massage technique - kneading, tapping, knocking, kneading & tapping and shiatsu. If you select "Position" option, press "OK" to enter the next option, and select the desired body part - whole, partial and point. If you select "Width" option, press "OK" to enter the next option, and select the desired width for massage rollers - narrow, middle, and wide. If you select "Speed" option, press "OK" to enter the next option, and select the desired speed for massage rollers - Level 1, Level 2, Level 3, Level 4, and Level 5.

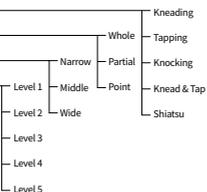

AIRBAG

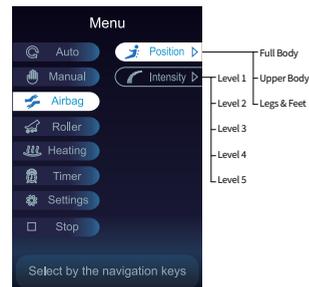


On the "Menu" interface, use the navigation buttons to select "Airbag" option. Then on "Position" option, press "OK" to enter the next option, and select the desired body position - full body, upper body and lower body. If you select "Intensity" option, press "OK" to enter the next option, and select the desired airbags message intensity - Level 1, Level 2, Level 3, Level 4, and Level 5.

FOOT ROLLER



On the "Menu" interface, use the navigation buttons to select the speed of message roller. Press "OK" to enter the next option, and select the desired foot roller speed - quick, soft and stop.

HEATING

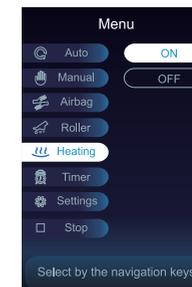


On the "Menu" interface, use the navigation buttons to select heat function for waist area. Press "OK" to enter the next option, and select the desired heat function - ON and OFF.

SETTINGS



On the "Menu" interface, use the navigation buttons to select message settings. Press "OK" to enter the next option, and select the desired language - 中文, English and Malay.

TIMER

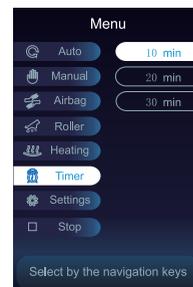


On the "Menu" interface, use the navigation keys to select message timing. Press "OK" to enter the next option, and select the desired message duration - 10 minutes, 20 minutes and 30 minutes. The default message duration is 20 minutes. So, the massage chair will turn off automatically when the time is up.

STOP




On the "Menu" interface, use the navigation buttons to select "Stop" option. Press "OK" to stop the massage program. Press "Menu" button to go back to "Menu" interface.

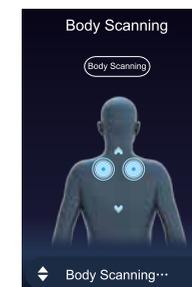

After selecting the desired message program, the massage chair will start body scanning and the words "body scanning..." will display on the screen of remote control. After the body scanning is finished, the buzzer will tick (once every second). At this point, the massage rollers will locate at the shoulder position, you can press Up and Down to adjust. When the massage rollers are adjusted, "shoulder height adjusting..." will display on the screen. The default message duration is 20 minutes. The massage chair will turn off and reset to its upright position once the massage is finished.

ELDERLY-FRIENDLY BUTTONS

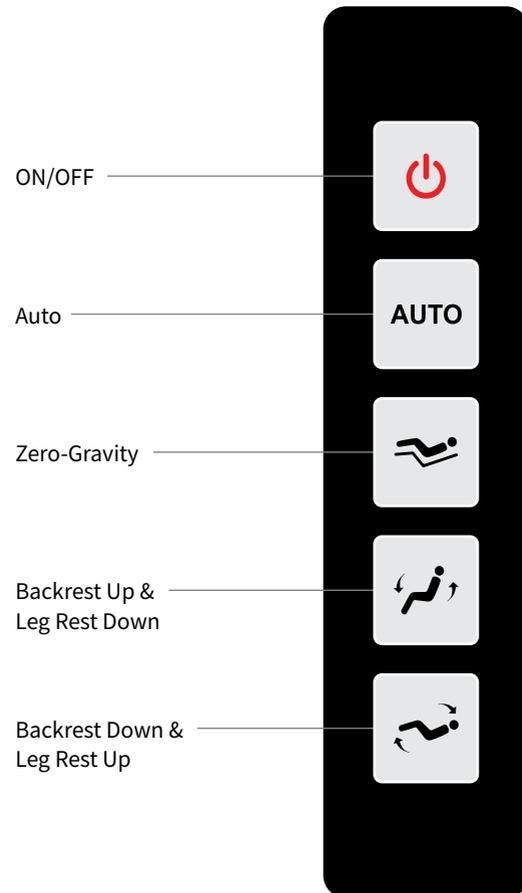


1		Press "ON/OFF" button to turn on or turn off the massage chair.
2		After switching on the massage chair, press the "Auto" button to select three auto massage programs with different LED colour indicators: ■ Recover ■ Relief ■ Stretch
3		After switching on the massage chair, press this button to enter zero gravity position. Press this button again to reset the massage chair to its upright position.
4		Keep pressing this button for backrest to go up and leg rest to go down. Release this button, the backrest and leg rest will stop moving, and the massage chair will be fixed in that position.
5		Keep pressing this button for backrest to go down and leg rest to go up. Release this button, the backrest and leg rest will stop moving, and the massage chair will be fixed in that position.

ON/OFF

STEP 1

Power On.

- 1 Plug in the power cable into the power socket which indicated as "a" in the diagram.
- 2 Plug in the power plug into the power supply socket.
- 3 Press the "ON/OFF" button at the power cord socket to turn on the massage chair.
- 4 Press "ON/OFF" button on the remote control. It will beep once and enters the main menu interface.

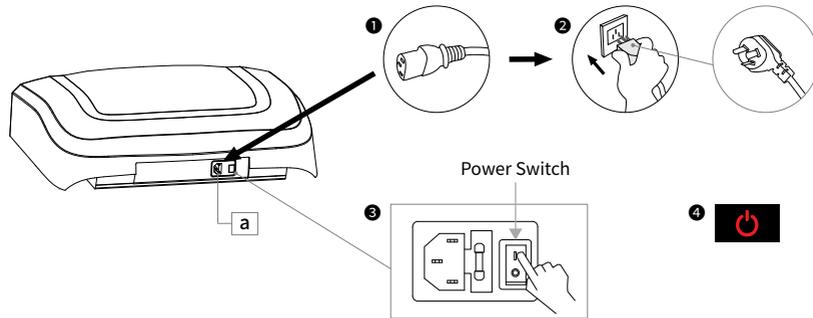

STEP 2

Massage.


- 1 The massage chair will operate based on the massage selections. Regarding the massage methods, please refer to page 16 and 17 for more details.
- 2 After the massage operation ends, the massage chair will return to the default position and the display screen will turn off.



STEP 3

Power Off.

- 1 Press "ON/OFF" button to turn off the massage chair and it will restore to its upright position automatically.
- 2 After the massage rollers return to its default position, turn off the power switch at the power case.
- 3 Unplug the power plug from the socket.

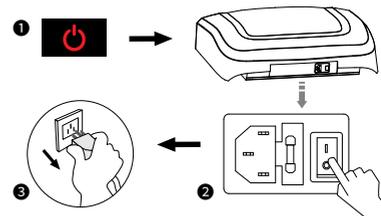

WARNING

1. Before using, pull up the head cushion, back cushion, etc. to check if the PU material is damaged. If is damaged, please stop using the massage chair and contact Careline or Coway Logistic Technicians to repair or replace.
2. Only plug to proper socket.

ATTENTION

1. Before sitting down, please make sure there is no objects in between armrest, leg rest, backrest and seat of massage chair.
2. Make sure the massage chair is in upright position before using.
3. Do not stand on massage chair while in use.

FUNCTION ILLUSTRATION

Leg Rest Up

Press this button, the leg rest to go up. Release this button, the leg rest will stop moving and it will be fixed in that position.




Leg Rest Down

Press this button, the leg rest to go down. Release this button, the leg rest will stop moving and it will be fixed in that position.




Backrest Down and Leg Rest Up

Press this button, the backrest to go down and leg rest to go up. Release this button, the backrest and leg rest will stop moving and it will be fixed in that position.

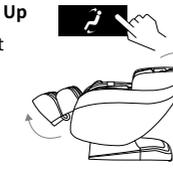

Backrest Up and Leg Rest Down

Press this button, the backrest will go up and leg rest to go down. Release this button, the backrest and leg rest will stop moving and it will be fixed in that position.

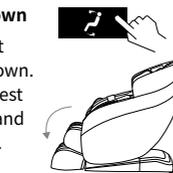


Zero-Gravity

Press this button the backrest to go down and leg rest to go up until the massage chair automatically reaches zero gravity state. Press this button again, the backrest and leg rest will stop moving and it will be fixed in that position.




Leg Rest Extend and Retract

Leg rest can extend or retract within a range of 22cm.

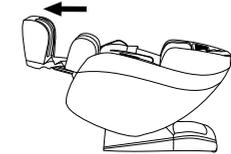

Arm Massage

The armrest has built-in airbag pressure massage function. Put your arms in the armrest airbag when it is not inflating. Once the airbag is inflated, the arms and palms will be massaged.

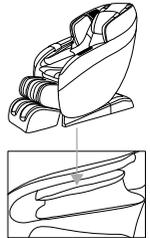


Shoulder Massage

Multilayer extrusion airbags are deployed on both sides of the shoulder to relieve fatigue.



Foot Massage

There are 2 rollers and 8 airbags to massage the soles and ankles.

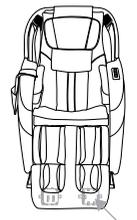


WARNING


1. Please ensure there are no people, pets or any objects around the massage chair to avoid unexpected injuries or damage.
2. When adjusting the backrest, be careful of the gap between the backrest and armrest.
3. When the leg rest is moving, please do not stand on or leave the seat.
4. When the leg rest is moving, please do not stop the leg rest from moving to avoid damaging the massage chair.
5. Please refer to page 15 and 16 regarding remote control instructions for more details.

RESTORATION OF MESSAGE CHAIR



- 1 Make sure there is no people or pets or any objects within the range of backrest and leg rest.

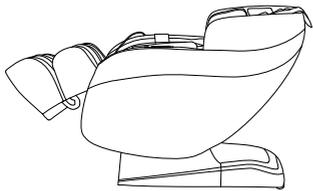


- 4 Switch off the power.

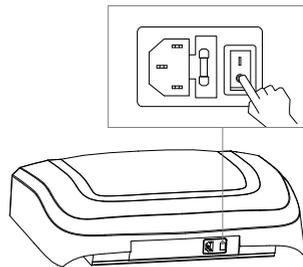

- 2 Restore the massage chair to its original position by pressing the “Backrest Up & Leg Rest Down” or “ON/OFF” button on the remote control.

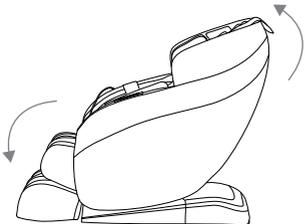


- 5 Unplug the electricity from the socket. (Attention: hold the right plug position)

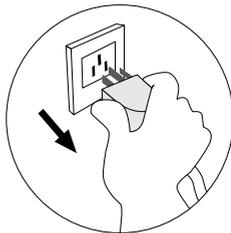

- 6 Clean the massage chair if necessary.

- 3 Put the remote control back into the remote control pocket after the massage chair is restored to its original position.

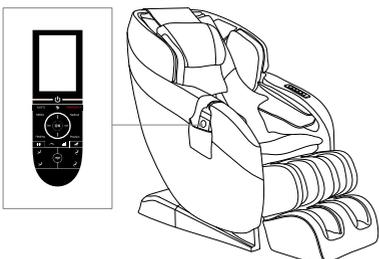


⚠ ATTENTION!

- After using, press “ON/OFF” button to end all the massage programs and wait for restoration. Please ensure to turn off the electricity to avoid any unexpected injuries to children or pets.
- After using, turn off the power and unplug the electricity to avoid moisture, dirt and aging of insulation in case of causing damage.



SYNTHETIC LEATHER

General Cleaning

Clean the massage chair with a soft and dry cloth.



Do not use the thinner, gasoline, alcohol or other chemical materials.

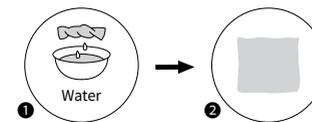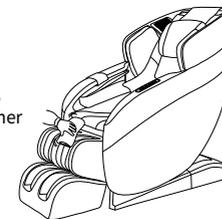

If Leather is Dirty

- 1 Dip the soft cloth, squeeze it and clean the stain on the surface gently.
- 2 Wash the soft cloth, squeeze it and wipe the leather surface again.
- 3 Clean it with a soft dry cloth.
- 4 Allow it to dry (hair dryer is prohibited).

PLASTIC PART




- 1 Dip the soft cloth, squeeze it and clean the plastic part.
- 2 Allow it to dry.

REMOTE CONTROL CLEANING




Remote Control



- 1 Wipe the remote control with a soft cloth after dipping it into the water and squeezing it.
- 2 Allow it to dry.

Do not use the thinner, gasoline, alcohol or other chemical materials.

CLOTH MATERIAL



- 1 Dip the soft cloth into the clean water, squeeze it and clean the cover surface. Do not use thinner, gasoline, alcohol or other chemical materials.
- 2 Allow it to dry.

ABOUT MESSAGE CHAIR CLEANING



- Before cleaning, unplug the electricity and do not touch the plug with wet hands.
- Make sure the hands are dry when plugging into the socket.
- If failed to follow the above instruction, user may get an electric shock or injured.

FAQ AND TROUBLESHOOTING

Problems/Issues	Possible reasons	Troubleshooting
The massage chair is not working after switching on the power.	Power switch at the bottom is not turned ON.	Turn on the power switch (refer to page 21).
	You may have not chosen a massage mode yet.	Choose any massage programs to start the massage.
	The power plug is not properly connected to the socket.	Make sure the plug and socket are connected.
	Wire or plug has been damaged.	Please contact Careline or Coway Logistic Technician for checking and/or replacement.
	The fuse of massage chair has burned out.	Please contact Careline or Coway Logistic Technician for checking and/or replacement.
There is a beep sound inside the massage chair while in use.	The inner circuit has a problem.	Please contact Careline or Coway Logistic Technician for checking and/or replacement.
	You are probably hearing the sounds of air pump, motors or mechanical parts.	This is normal.
Different positions of the left rollers and right rollers.	The massage rollers do not always run symmetrically.	This is normal. You may stop the massage and restart to get the massage rollers to run symmetrically.
The sound suddenly becomes much louder while in use.	You may have used the massage chair continuously for a long period of time.	Turn off the power to allow the massage chair to rest for an hour before switching it on again.
	The internal parts may have worn down after using the massage chair consistently over a long period of time.	Please contact Careline or Coway Logistic Technician for checking and/or replacement.
The massage program suddenly stops while in use.	Poor power connection.	Connect the electricity power again.
	The auto program timer is finished.	Turn off the power to allow the massage chair to rest for an hour before switching it on again.
Neither the backrest nor the leg rest can lay down.	Check if there are any objects around the massage chair; or if the massage chair is overloaded. Sometimes, the massage chair may automatically stop working for safety purposes.	Remove the objects and turn off the power to allow the massage chair to rest for an hour before switching it on again.
The massage chair can't return to its original position.	Excessive operation; timer setting is finished.	Please contact Careline or Coway Logistic Technician for checking and/or replacement.
Electric wire or plug overheats.	It may work overload.	Turn off the power to allow the massage chair to rest for an hour before switching it on again.
	Other abnormal cases.	Stop using the massage chair and contact Careline or Coway Logistic Technician for checking and/or replacement.



Note: If your problems are not stated as above, please turn off the power supply and contact Careline or Coway Logistic Technician for assistance.

TECHNICAL DATA

Name	Coway Massage Chair
Model	MC-S01B/MC-S01W
Input Voltage	220-240V ~ 50/60Hz
Safety Design	Class 1
Power	180W
Net Weight / Gross Weight	84kg / 100.5kg
Packing Size	1160 × 770 × 1265mm (L × W × H)

